

HESTORE.HU
elektronikai alkatrész áruház

EN: This Datasheet is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.

FLUKE®

VT02, VT04

Visual IR Thermometer

Users Manual

October 2012, Rev.1, 7/13

© 2012-2013 Fluke Corporation. All rights reserved.

Specifications are subject to change without notice.

All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for two years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands

Table of Contents

Title	Page
Introduction	1
How to Contact Fluke	2
Safety Information	2
Before You Start	4
Power On and Off	5
Rechargeable Battery	6
Features and Controls	7
Button Operation	8
Image Blending	8
Visual Image Alignment Control	9
Capture and Save	10
Menu Functions	11
Basic Navigation	11
Review Memory	13
Emissivity	13
Temperature Measurement	14
Color Palette	17
Reflected Background Temperature	17
Spot Temperature Markers	17
Temperature Units	18
Date and Time	18
Hi/Lo Temperature Alarm (VT04)	19
Time-Lapse Image Capture (VT04)	20
Auto-Monitor (VT04)	21
Measurements	23
Smartview® Software	23
Maintenance	24
How to Clean	24
Battery Care	25
VT02	26
VT04	27
Specifications	27

VT02, VT04
Users Manual

List of Tables

Table	Title	Page
1.	Symbols	3
2.	Packing List	4
3.	Features.....	7
4.	Menu Icons	12
5.	Temperature Measurement Accuracy	15

VT02, VT04
Users Manual

List of Figures

Figure	Title	Page
1.	Start-Up Screen and Status Indicator.....	5
2.	Rechargeable Battery.....	6
3.	Blend Options.....	8
4.	Visual Image Alignment.....	9
5.	Micro SD Memory Card Warning Icons.....	10
6.	Menu Navigation and Battery Icon.....	11
7.	Parameter Adjustment	12
8.	On-Screen Comparison of D:S Ratio.....	16
9.	Detection Ability	16
10.	VT04 Hi/Lo Temperature Alarm	19
11.	Image Capture Scenarios for Auto-Monitor	22
12.	VT02 Battery Replacement	26

VT02, VT04
Users Manual

Introduction

The VT Series (the Product) are Visual IR Thermometers that combine surface temperature measurement with real-time thermal and visual images. The thermal image removes the time necessary for component-by-component measurement associated with a traditional spot thermometer (radiometer). The Product is ideal for electrical, HVAC, and facility maintenance applications.

The recommended use model is:

1. Scan a broad area with the blended thermal and visual image to quickly identify temperature anomalies that need more inspection.
2. Use the wide field-of-view to move closer to the target for a temperature measurement with more detail.
3. Capture both thermal and visual images with a single trigger pull.
4. Create a report with Fluke SmartView® software.

The Product is easy to use. Turn on and within seconds it provides an image with no training needed. Several features increase the accuracy and usability of the Product:

- Adjustable emissivity and reflected background compensation improves measurement accuracy on semi-reflective surfaces
- Hot and cold spot temperature markers that guide the user to the hottest and coldest regions in the thermal image
- Selectable color palettes
- Visual/Thermal image alignment

The VT04 includes these additional features:

- Hi/Lo Temperature Alarms
- Time-Lapse Image Capture
- Auto-Monitor

How to Contact Fluke

To contact Fluke, use one of these telephone numbers:

- USA: 1-800-760-4523
- Canada: 1-800-36-FLUKE (1-800-363-5853)
- Europe: +31 402-675-200
- Japan: +81-3-6714-3114
- Singapore: +65-6799-5566
- Anywhere in the world: +1-425-446-5500

Or, visit Fluke's website at www.fluke.com.

To register your Product, visit <http://register.fluke.com>.

To view, print, or download the latest manual supplement, visit
<http://us.fluke.com/usen/support/manuals>.

Safety Information

A **Warning** identifies hazardous conditions and procedures that are dangerous to the user. A **Caution** identifies conditions and procedures that can cause damage to the Product or the equipment under test.

Warning

To prevent possible electrical shock, fire, or personal injury:

- **Read all safety information before you use the Product.**
- **Carefully read all instructions.**
- **Use the Product only as specified, or the protection supplied by the Product can be compromised.**
- **Replace or recharge the batteries when the low battery indicator shows to prevent incorrect measurements.**
- **Do not use the Product around explosive gas, vapor, or in damp or wet environments.**
- **Do not use the Product if it operates incorrectly.**
- **Do not use the Product if it is damaged.**
- **See emissivity information for actual temperatures. Reflective objects result in lower than actual temperature measurements. These objects pose a burn hazard.**

- Remove the batteries if the Product is not used for an extended period of time, or if stored in temperatures above 50 °C. If the batteries are not removed, battery leakage can damage the Product.
- Follow all battery care and charging instructions in this manual.
- Use only specified replacement parts.
- Use only the Fluke supplied power adapter to charge the VT04 battery.

Table 1 is a list of symbols used on the Product or in this manual.

Table 1. Symbols

Symbol	Description
	Important information. See manual.
	Hazardous voltage. Risk of electrical shock.
	Conforms to relevant Australian standards.
	Conforms to requirements of European Union and European Free Trade Association.
	Conforms to relevant South Korean EMC standards.
	This camera contains a Lithium-ion battery. Do not mix with the solid waste stream. Spent batteries should be disposed of by a qualified recycler or hazardous materials handler per local regulations. Go to Fluke's website for recycling information.
	This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste. Go to Fluke's website for recycling information.

Before You Start

Table 2 is a list of all items included with the Product.

Table 2. Packing List

Description	Part Number	Model	
		VT02	VT04
VT02 Visual IR Thermometer	4253599	●	
VT04 Visual IR Thermometer	4366444		●
AA Alkaline Batteries (QTY. 4)	1560231	●	
Rechargeable Battery	4365971		●
Micro SD Memory Card and conversion adapter to standard SD Memory Card ^[1]	4269849	●	●
Transport/Storage Case	4272528	●	●
Micro USB Charger/Power Supply	4366918		●
VT Series Quick Reference Card ^[2]	4257700	●	●
CD-ROM with Users Manual	4253607	●	●
SmartView® Software on CD-ROM	2814474	●	●


[1] Fluke recommends the micro SD memory card that is supplied with the Product. Fluke does not warrant the use or reliability of aftermarket SD memory cards of different brands or capacities.

[2] Printed in English, Spanish, French, German, and Simplified Chinese. See the CD-ROM for additional languages. To request a printed Quick Reference Card in a language not supplied with your product, email Fluke at TPubs@fluke.com. Specify the product name and language preference in the subject line.

Power On and Off

To turn on the Product, push and hold  for 2 seconds. A start-up screen shows on the display and an indicator bar shows the status, see Figure 1. The indication bar increases on power up and decreases on power down. After the start-up screen, the Product is ready to use. To turn off the Product, push and hold  for 2 seconds.

The Auto Off feature turns off the Product after 10 minutes of inactivity.

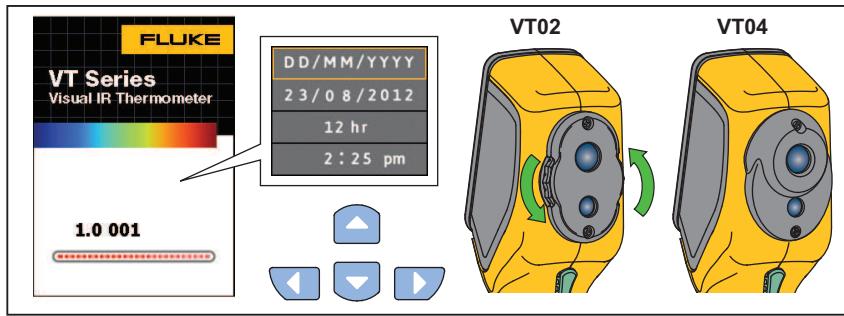

hak03.eps

Figure 1. Start-Up Screen and Status Indicator

For the first time use, or when the batteries are removed for more than a few hours, the Date and Time menu opens. See page 18 for more information about how to set the date and time.

Note

All visual IR thermometers need sufficient warm-up time for the most accurate temperature measurements. This time can often vary by model and by environmental conditions. Although most visual IR thermometers are fully warmed up in 3 to 5 minutes, it is always best to wait a minimum of 10 minutes if the most accurate temperature measurement is very important to your application. When you move a visual IR thermometer between environments with large differences in ambient temperature, more adjustment time can be required.

Rechargeable Battery

The VT04 has a rechargeable Li-ion battery.

Note

New batteries are not fully charged. Two to ten normal charging/discharging cycles may be required before the battery charges to its maximum capacity.


Before using the VT04 for the first time, charge the battery:

1. Plug the ac power supply into an ac wall outlet.
2. Connect the micro-USB connector to the VT04. See Figure 2.

While the battery is charging,  shows on the display and the status LED is red. When charged,  shows on the display and the status LED is green. The typical charge time from 100 % discharged to 100 % charge is 5 to 6 hours.

Note

Make sure the Product is near room temperature before you connect it to the charger. See the charging temperature specification. Do not charge in hot or cold places. Charging in extreme temperatures reduces the battery pack's ability to hold a charge.

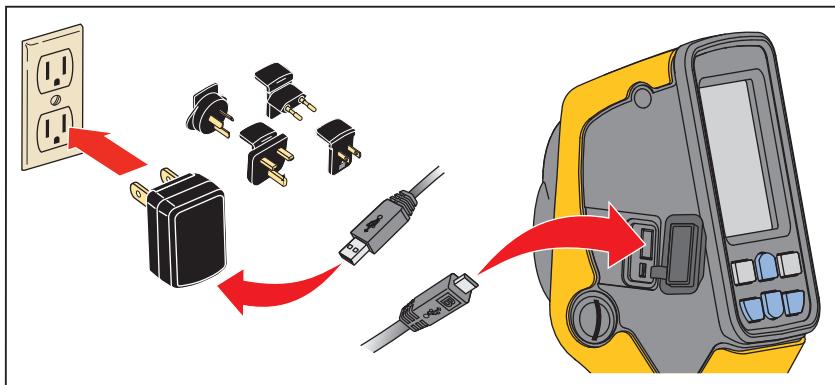


hak18.eps

Figure 2. Rechargeable Battery

Features and Controls

Table 3 is a list of the Product features with the location of each control.

Table 3. Features

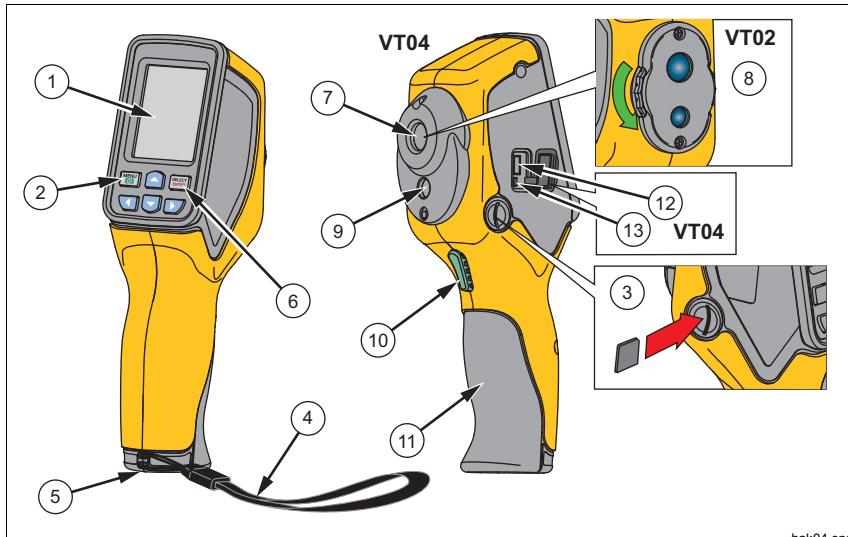

hak04.eps

Item	Description
①	LCD Display
②	Power On/Off and Menu
③	Micro SD Memory Card Slot
④	Lanyard
⑤	Tripod Mount
⑥	Select/Enter
⑦	Infrared Lens
⑧	Rotating Lens Cover (VT02)
⑨	Visual Camera
⑩	Trigger for Image Capture
⑪	Battery Cover
⑫	Micro USB Connector (Input 2.5 W, 0.5 A at 5 V)
⑬	Battery Charge Status LED

Button Operation

Two functions are accessed directly from the buttons: Blending/Capture and Save. The arrow buttons are used for menu navigation.

Image Blending

Image blending makes it easier to understand infrared images through the use of an aligned visible image and infrared image. The Product captures a visible image with each infrared image to exactly show the target area and more effectively share it with others.

To use the blending function:

1. Push  until  shows in the bottom left-hand corner of the screen.
2. Use / to adjust the blending from 0 % to 100 %.

The blend options are shown in Figure 3.

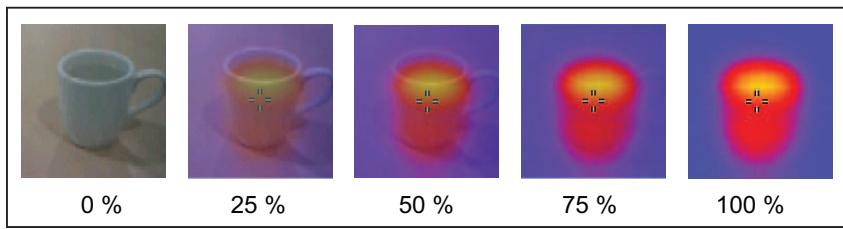


Figure 3. Blend Options

Visual Image Alignment Control

The image blending overlay and the visual camera are positioned above each other in the VT Series. This vertical parallax will change with distance to your object. To correct the parallax for a near or far distance you have a visual image alignment control. See Figure 4.

To toggle the control between a near object or far object:

1. Push NEAR (◀) for a measurement distance from 15 cm to 23 cm (6 in to 9 in).
2. Push FAR (▶) or a measurement distance further than 23 cm/9 in.

The Near or Far icon shows in the upper left corner of the display.

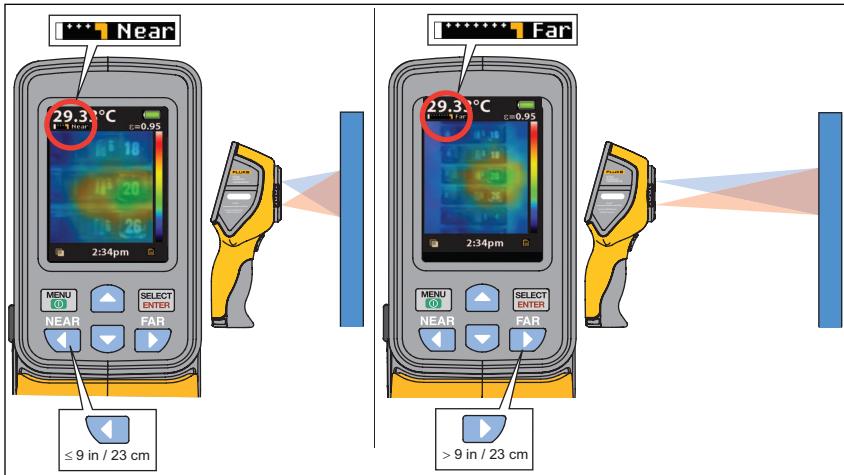


Figure 4. Visual Image Alignment

hak19.eps

Capture and Save

The Product saves up to 10,000 images/GB on the Micro SD memory card.

To capture the image and save it to memory:

1. Push **[MENU 6]** until  shows in the bottom right-hand corner of the screen.
2. Point the Product at the object or area of interest.
3. Pull the trigger to capture the image.

The image remains frozen for about 4 seconds. Next, a dialog box prompts you to save or discard the image.

4. Push **[SELECT ENTER]** to save or **[MENU 6]** to discard the image.

The display has an icon that shows the current status of the micro SD memory card, see Figure 5.

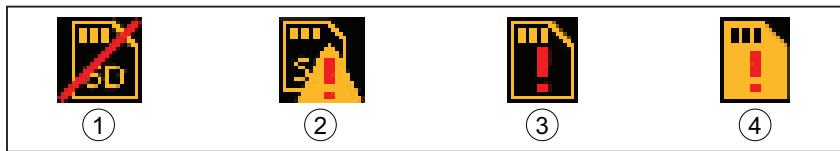


Figure 5. Micro SD Memory Card Warning Icons

- ① No Micro SD Memory Card in slot
- ② Micro SD Memory Card card error
- ③ Micro SD Memory Card empty
- ④ Micro SD Memory Card full

Note

A routine file back-up procedure is recommended for the Micro SD Memory Card to store these files in a safe location.

Menu Functions

To open the display menu, push **[MENU]**. The menu has options for memory, emissivity, background temperature, spot temperature markers, date, and time.

Basic Navigation

The basic functions of the Product are accessible with the six buttons and color display. Only five options show on the display at one time. The **[◀]/[▶]** buttons scroll through the display menu. The middle option is always highlighted in yellow. See Figure 6.

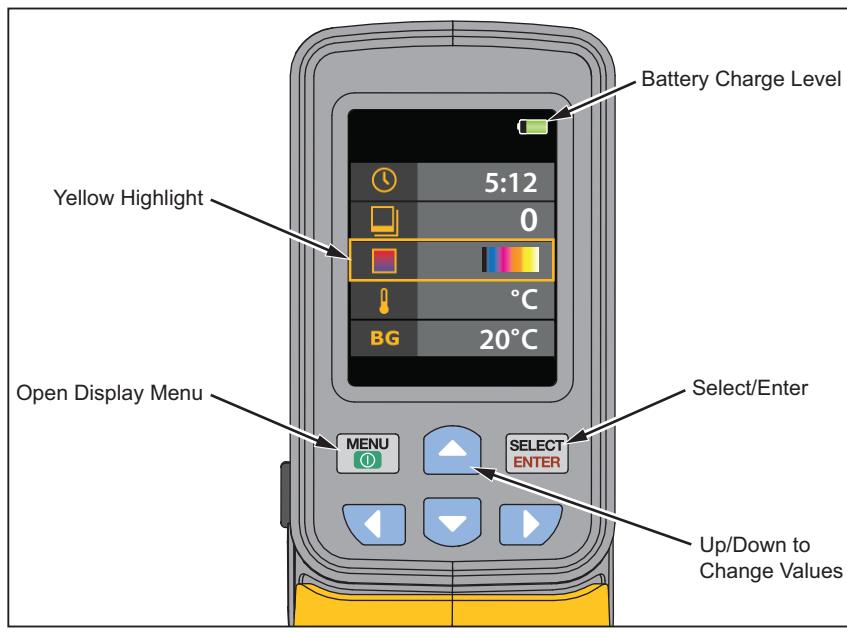


Figure 6. Menu Navigation and Battery Icon

hak07.eps

Push **[SELECT/ENTER]** to select the menu option and edit the value. The **[◀]/[▶]** buttons change the value of the menu selection. After adjustments are made, push **[SELECT/ENTER]** to accept a new value and exit the edit mode. See Figure 7.

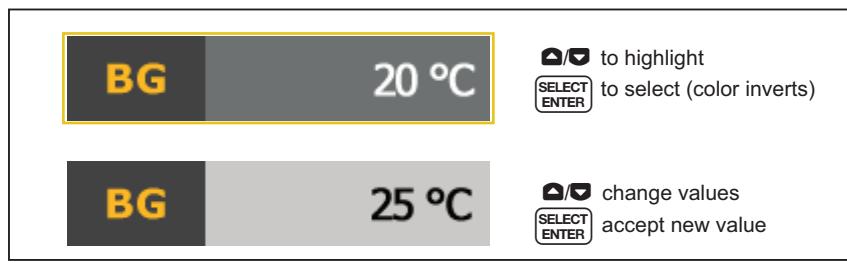


Figure 7. Parameter Adjustment

hak08.eps

Table 4 is a list of the menu icons and their descriptions.

Table 4. Menu Icons

Icon	Description
	View Stored images
	Emissivity
	Color Palette
	Background Temperature
	Temperature Markers
	Temperature Units
	Clock
	Hi/Lo Temperature Alarm (VT04)
	Auto-Monitor (VT04)
	Time-Lapse Image Capture (VT04)

Review Memory

The Memory mode lets you view the stored images. You can also delete images in this menu.

1. Push  to open the Memory mode.
2. Push / to scroll through and review the stored images.
3. Push  to delete image.

Emissivity

The emissivity is adjustable in 0.01 steps from 0.10 to 01.00. The default value is set at 0.95.

The correct emissivity values are important for you to make the most accurate temperature measurements. Emissivity of a surface can have a large effect on the apparent temperatures that the Product observes. Understanding the emissivity of the inspection surface can, but not always, allow you to obtain more accurate temperature measurements.

Go to <http://www.fluke.com/Fluke-Thermal-Imaging-and-Thermal-Imagers> for more information on emissivity and how to get the most accurate temperature measurements.

Temperature Measurement

All objects radiate infrared energy. The quantity of energy radiated is based on the actual surface temperature and the surface emissivity of the object. The Product senses the infrared energy from the surface of the object and uses this data to calculate an estimated temperature value. Many common objects and materials such as painted metal, wood, water, skin, and cloth are very good at radiating energy and it is easy to get relatively accurate measurements. For surfaces that are good at radiating energy (high emissivity), the emissivity factor is $\geq 90\%$ (0.90). This simplification does not work on shiny surfaces or unpainted metals as they have an emissivity of $<60\%$ (0.60). These materials are not good at radiating energy and are classified as low emissivity. To more accurately measure materials with a low emissivity, an emissivity correction is necessary. Adjustment to the emissivity value will usually allow the Product to calculate a more accurate estimate of the actual temperature.

Note


Surfaces with an emissivity <0.60 make reliable and consistent determination of actual temperatures problematic. The lower the emissivity, the more potential error is associated with the temperature measurement calculations of the Product, even when emissivity and reflected background adjustments are attempted and performed properly.

⚠ Warning

To prevent personal injury, see emissivity information for actual temperatures. Reflective objects result in lower than actual temperature measurements. These objects pose a burn hazard.

Table 5 shows the distance to area ratio (D:S) for measurement accuracy.


Table 5. Temperature Measurement Accuracy

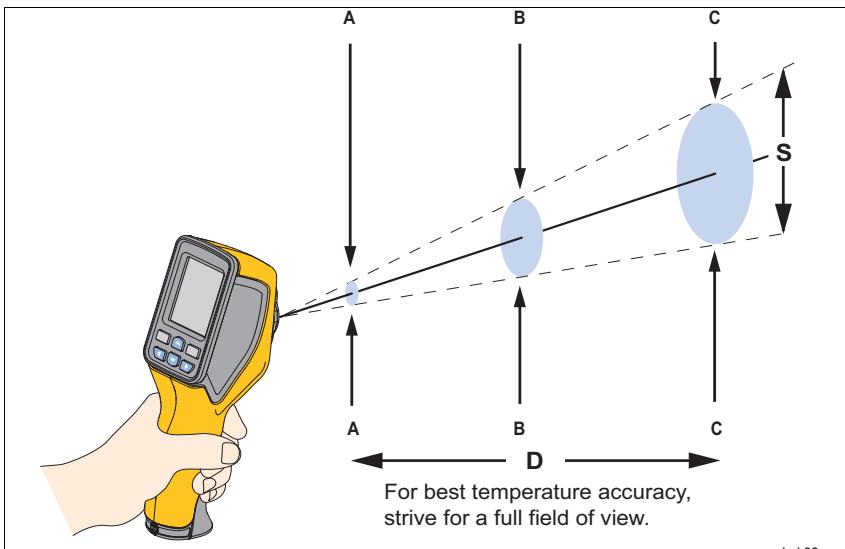

hak09.eps


Model	D:S	A	B	C
VT02	6:1	38 mm @ 230 mm 1.5 in @ 9 in	60mm @ 360 mm 2.4 in @ 14.5 in	100 mm @ 600 mm 4 in @ 24 in
		26 mm @ 230 mm 1 in @ 9 in	40 mm @ 360 mm 1.6 in @ 14.5 in	67 mm @ 600 mm 2.7 in @ 24 in
VT04	9:1			

Figure 8 shows how the D:S ratio compares on-screen for both models. The higher the ratio, the smaller the target area needs to be for an accurate measurement. Figure 9 illustrates the detection ability.

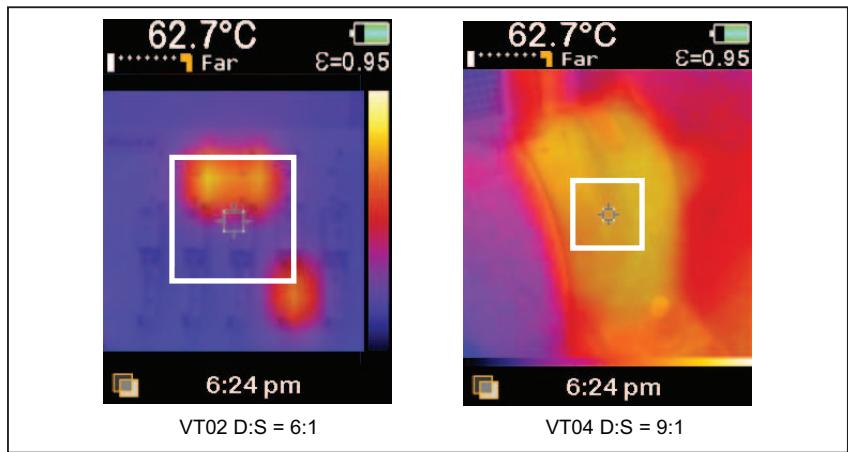

hak21.eps

Figure 8. On-Screen Comparison of D:S Ratio

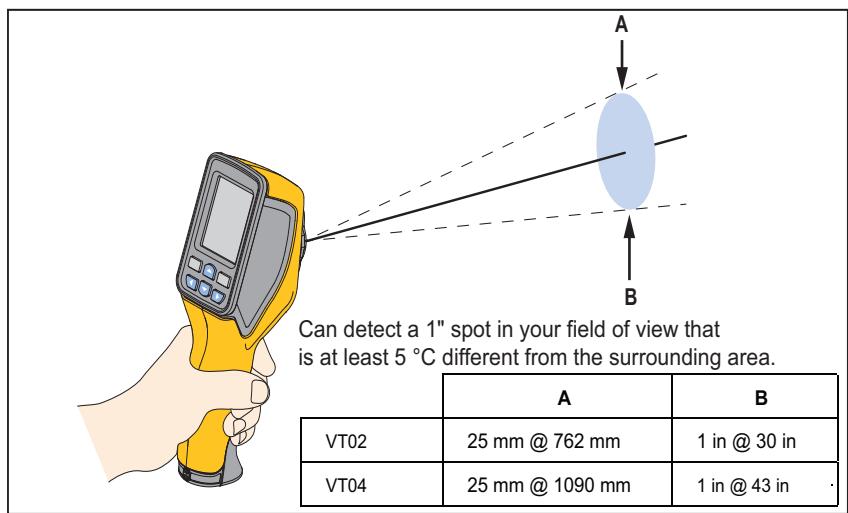

hak14.eps

Figure 9. Detection Ability

Color Palette

The Palette menu changes the false-color presentation of the infrared images that are on the display or captured. A variety of palettes are available. Some palettes are more suitable for specific applications and are set as required.

Grayscale Palettes offer an equal, linear presentation of colors that allow for best presentation of detail.

The High Contrast palette offers a weighted presentation of colors. This palette is best in situations with high thermal contrast for increased color contrast between the high temperatures and low temperatures.

The Ironbow and Rainbow palettes offer a mixture of the High Contrast and Grayscale palettes.

Palette	VT02	VT04
	●	●
	●	●
	●	●
	●	●
	●	●
		●

Reflected Background Temperature

The background temperature can be set between -10 °C and +100 °C.

Compensation for reflected background temperature is set in the Background tab. Very hot objects or very cold objects can affect the apparent temperature and measurement accuracy of the target or object of interest, especially when surface emissivity is low. Adjustment of the reflected background temperature can make the temperature measurement better in many situations. For more information, see *Emissivity* on page 13.

Spot Temperature Markers

The spot temperature markers turn on and off. When turned on, the marker is an indication of a hot or cold spot in the scene that may require additional evaluation. When turned off, the user is able to concentrate on the single measurement pixel.

Temperature Units

The Product displays temperatures in °C or °F.

Date and Time

In the Clock menu the user can set the time and the date.

Push **SELECT ENTER** to select the Clock.



1. Push **SELECT ENTER** again to select the date type. Move through the menu selections with the **◀/▶** buttons.
Selections are:
 - DD/MM/YYYY
 - MM/DD/YYYY
2. Move down to the date.
3. Use **◀/▶** to select each date item. Use **▲/▼** to change the value.
4. Push **SELECT ENTER** to set the value.
5. Move down to 12/24 hour clock. Push **SELECT ENTER** to edit the option.
6. Use the **◀/▶** to move through the selections.
7. Push **SELECT ENTER** to set the selection as:
 - 12 hr
 - 24 hr
8. Move down to time.
9. Push **SELECT ENTER** to edit the option.
10. Use **◀/▶** to move through individual time items.
11. Use **▲/▼** to change the value.
12. Push **SELECT ENTER** to set the value.
13. Push **MENU** to exit the Clock menu and go to the live image.

Hi/Lo Temperature Alarm (VT04)

High temperature and low temperature alarms are available on the VT04. The temperature threshold is set for either the high or low alarm. When an alarm is set, you can quickly scan the scene and find objects that are above or below the threshold. An alarm condition is clearly shown on the screen as a flashing red/black band (Hi) or blue/black band (Lo). See Figure 10. In accordance with the D:S ratio (see Table 5), the object size should be large enough to cover the area defined by the 4 corner markers.

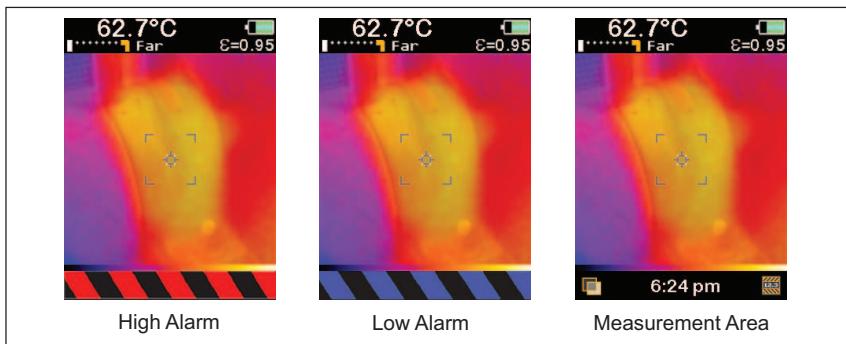


Figure 10. VT04 Hi/Lo Temperature Alarm

hak15.eps

Note

The Auto Off feature is disabled in the Alarm mode.


To turn on the alarm:



To turn off the alarm:



To set an alarm:

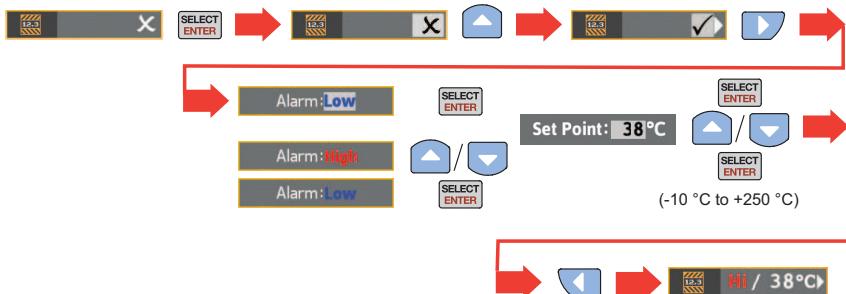


Time-Lapse Image Capture (VT04)

The VT04 has time-lapse feature that monitors equipment with captured images at a user-set time interval. The user selects from a menu of preset values for both the time interval and duration.

By default, the file name for these captured images includes an S, for example, XXXS.is2.

To set the time-lapse:

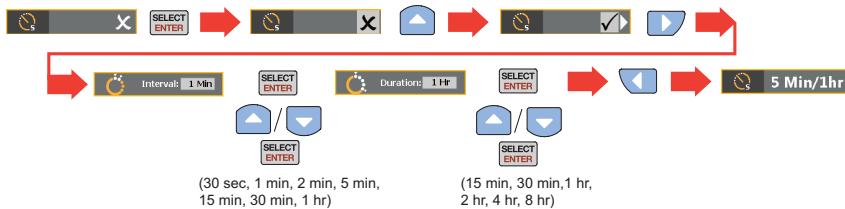

To stop the time-lapse image capture:



Note

- The Auto Off feature is disabled in the Time-Lapse Image Capture mode.
- The Time-Lapse Image Capture feature is disabled when the Product is connected to power.

Auto-Monitor (VT04)


The Auto-Monitor feature is similar to the alarm feature. The difference is that instead of a flashing warning, the VT04 saves an image. When the temperature of an object in the scene goes above or below the threshold value, the VT04 saves the image.

By default, the file name for these captured images includes an A, for example, XXXA.is2.

Note

Measurements are the scene temperature (area shown inside the markers).

To set the Auto-Monitor:

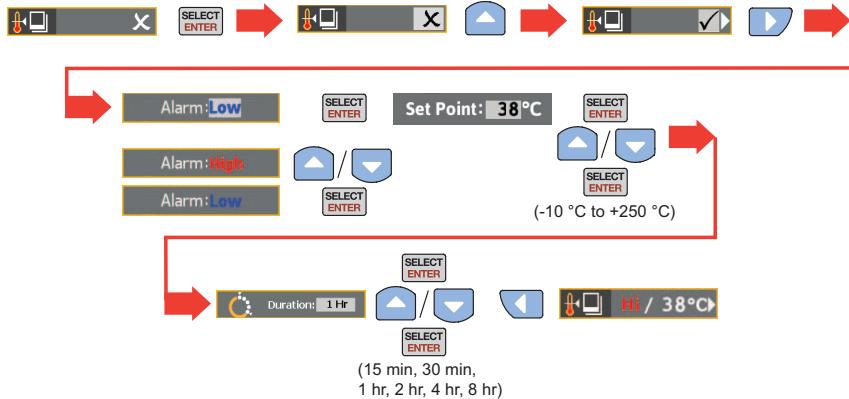

To stop the Auto-Monitor:



Note

- The Auto Off feature is disabled in the Auto-Monitor mode.
- The Auto-Monitor feature is disabled when the Product is connected to power.

To prevent too many images being saved, there is a 10-minute delay between saved images. The delay applies only when a temperature threshold is breached and stays breached. When the scene temperature goes below (or above for low alarm) the threshold temperature, the delay is reset to zero. See Figure 11 for typical scenarios.


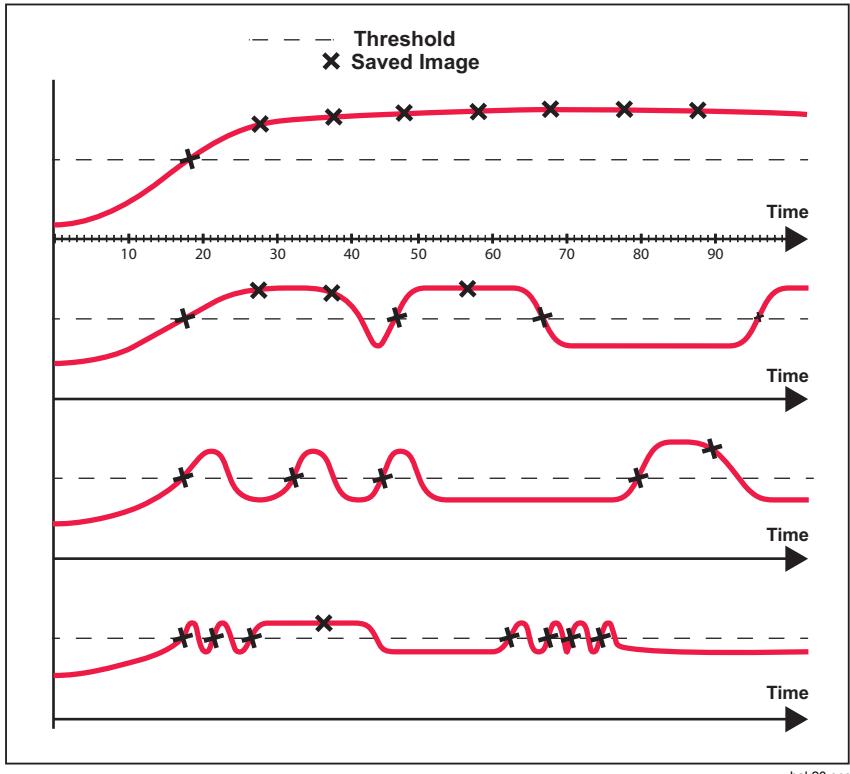


Figure 11. Image Capture Scenarios for Auto-Monitor

Measurements

The temperature measurement of the center area is shown at the top of the display. The emissivity setting also shows at the top of the display. When the hot/cold temperature markers are turned on, move the Product until the hot or cold spot coincides with the middle measurement area. Point the Product at an object that is likely to be hotter or colder than its surroundings for best results. The value of the hot/cold point shows at the top of the screen. This example shows a measurement on the VT04 display.

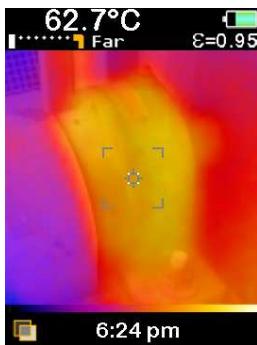

hak13a.jpg

Smartview® Software

Smartview® software is supplied with the Product. This software contains features to analyze images, organize data and information, and make professional reports.

Smartview includes a function to export IR and visible images as .is2 files.

Maintenance

Maintenance is not necessary for this Product.

⚠️⚠️ Warning

To prevent possible electrical shock, fire, or personal injury, use only specified replacement parts.

⚠️ Caution

To prevent damage to the Product, do not leave the camera exposed to a heat source or high-temperature environments, such as an unattended vehicle in the sun.

How to Clean

Clean the case with a damp cloth and a weak soap solution. Do not use abrasives, isopropyl alcohol, or solvents to clean the case or lens/window. If used and stored properly, the infrared lens on your Product should require only occasional cleaning.

When necessary, to clean the lens:

1. Use a hand-squeeze air pump to gently blow off any dust or debris from the lens surface.
2. If the lens surface requires additional cleaning, use a clean, fine-fiber or micro-fiber cloth, dampened with a mild, soapy water solution. Gently wipe surface of lens to remove smudges and debris.
3. Dry with an absorbent, clean fine-fiber or micro-fiber cloth.

Note

Minor smudges and dirt should not significantly affect the performance of the Product. However, large scratches or the removal of the protective coating on the infrared lens can affect both image quality and the temperature measurement accuracy.

Battery Care

Warning

To prevent personal injury and for safe operation and maintenance of the Product:

- Batteries contain hazardous chemicals that can cause burns or explode. If exposure to chemicals occurs, clean with water and get medical aid.
- Be sure that the battery polarity is correct to prevent battery leakage.
- Do not short the battery terminals together.
- Keep cells and battery packs clean and dry. Clean dirty connectors with a dry, clean cloth.
- Do not disassemble or crush battery cells and battery packs.
- Do not put battery cells and battery packs near heat or fire. Do not put in sunlight.
- Use only Fluke supplied power adapters to charge the VT04 battery.

Caution

Do not incinerate the Product and/or battery. Go to Fluke's website for recycling information.

VT02

To replace the batteries:

1. Remove the battery cover from the handle.
2. Remove the discharged batteries.

Note

Do not charge the batteries included with the VT02.

3. Install new batteries with the correct polarity, see Figure 12.

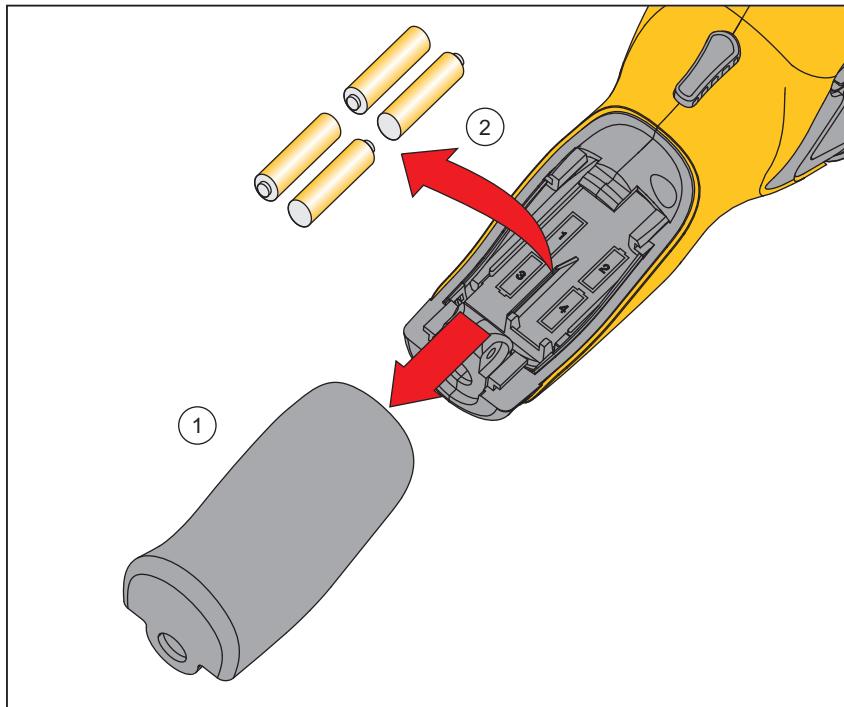


Figure 12. VT02 Battery Replacement

hak06.eps

4. Slide battery cover into place on the handle.

VT04

To get the best performance from the Li-Ion battery, use these guidelines:

- Do not store the Product on the charger for more than 24 hours as reduced battery life may result.
- Charge the Product for a 2-hour minimum at least every six months to maximize battery life.
- Without use, the battery will self-discharge in approximately 6 months. Batteries stored for long periods may require two to ten charging cycles before it reaches full capacity.
- Always operate the Product within the operating temperature range in the specifications.

Specifications

Temperature

Temperature Measurement Range	-10 °C to +250 °C
Temperature Measurement Accuracy	±2 °C or ±2 % as tested (at 25 °C), whichever is the greater
On-Screen Emissivity Correction.....	Yes
On-Screen Reflected Background	
Temperature Compensation	Yes

Image Performance

Image Capture Frequency	8 Hz
Detector Type	Uncooled pyroelectric ceramic
Thermal Sensitivity (NETD)	≤250 mK
Infrared Spectral Band.....	6.5 µm to 14 µm
Visual Camera	11025 pixels
Field of View	
VT02	20° X 20°
VT04	28° X 28°
Focus Mechanism.....	Fixed Focus

Image Presentation

Palettes	
VT02	Ironbow, Rainbow, Rainbow High Contrast, Grayscale (white hot) and Grayscale (black hot)
VT04	Hot Metal, Ironbow, Rainbow, Rainbow High Contrast, Grayscale (white hot) and Grayscale (black hot)
Level and Span	Auto

Blending Information

Parallax Correction of Visual and IR BlendingFixed with Near/Far User Selection
Near <23 cm
Far >23 cm

View OptionsBlending of the visual and the infrared from full infrared to full visual in 25 % steps

Hot Spot and Cold Spot Tracking.....Yes

Image capture and data storage

Image Capture.....Image available for review before a save

Storage MediumMicro SD memory card, stores up to 10,000 images/GB

File Formatis2

Memory Review.....Scroll through all saved images and view on-screen

Operating Temperature.....-5 °C to +45 °C

Storage Temperature-20 °C to +60 °C

Relative Humidity10 % to 90 % non-condensing

Operating Altitude2,000 meters

Display2.2 in diagonal

Controls and Adjustments

VT02 VT04

Select Color Palette

● ●

User-Selectable Temperature Scale (°F/°C)

● ●

Time/Date Set

● ●

Emissivity Selection

● ●

Reflected Background Temperature Compensation

● ●

Hi/Lo Temperature Alarm

●

Time-Lapse Image Capture

●

Auto-Monitor

●

SoftwareSmartview®

Batteries

Type	
VT04	Li-Ion Rechargeable, 3.6 V, 2250 mAh, 8.1 Wh
VT02	4 AA, LR6 1.5 V
Battery Life	8 hrs
Power Save	Power down after 10 minutes of inactivity

Standards

Electromagnetic Environment	EN 61326-1: Portable
US FCC	CFR47: Class A. Part 15 subpart B.
Electromagnetic Compatibility	Applies to use in Korea only. Class A Equipment (Industrial Broadcasting & Communication Equipment) ^[1]
	[1] This product meets requirements for industrial (Class A) electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and is not to be used in homes.
Safety Compliance	IEC/EN 61010-1 Pollution Degree 2

Drop

VT02	MIL-PRF-28800F; Class 2 section 4.5.5.4.2; 30 cm
VT04	2 meter
Size (H x W x L)	21 cm x 7.5 cm x 5.5 cm (8.3 in x 3 in x 2.2 in)
Weight (Battery Included)	<300 gm (10.5 oz)
Warranty	2 years
Recommended Calibration Cycle	2 years

VT02, VT04
Users Manual
