



**HESTORE.HU**  
elektronikai alkatrész áruház

**EN:** This Datasheet is presented by the manufacturer.

Please visit our website for pricing and availability at [www.hestore.hu](http://www.hestore.hu).



- **Notice:** Signal pairing is required before use.
- **Achtung:** Vor der Verwendung ist eine Signalpaarung erforderlich.
- **Attention :** Un appairage de signal est nécessaire avant utilisation.
- **Внимание:** перед использованием необходимо выполнить сопряжение сигналов.
- **Attenzione:** È necessario eseguire l'abbinamento del segnale prima dell'uso.
- **Atenção:** É necessário fazer o pareamento de sinal antes do uso.
- **Atención:** Se requiere emparejamiento de señales antes del uso.
- **주의:** 사용 전에 신호 페어링을 해야 합니다.



**Video Tutorial**

Scan the QR code to  
enter the tutorial video  
of the settings

<https://youtu.be/sX4j6LiwdF0>



**CONTACT US**






**WhatsApp: +86 135 0227 8583 / +86 181 3880 5271**



**Email : dieseelectronic@163.com**

# PRODUCT DETAIL & WIRING DIAGRAM

AC: 85V-250V

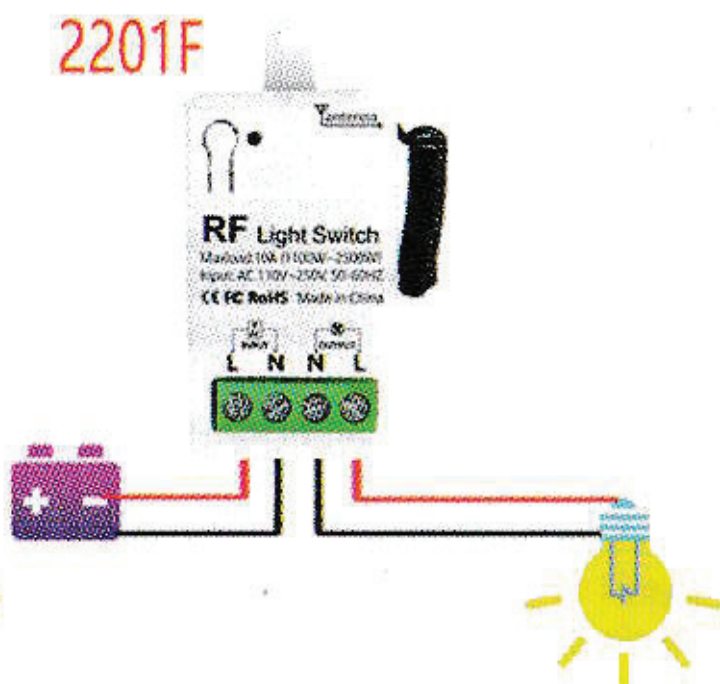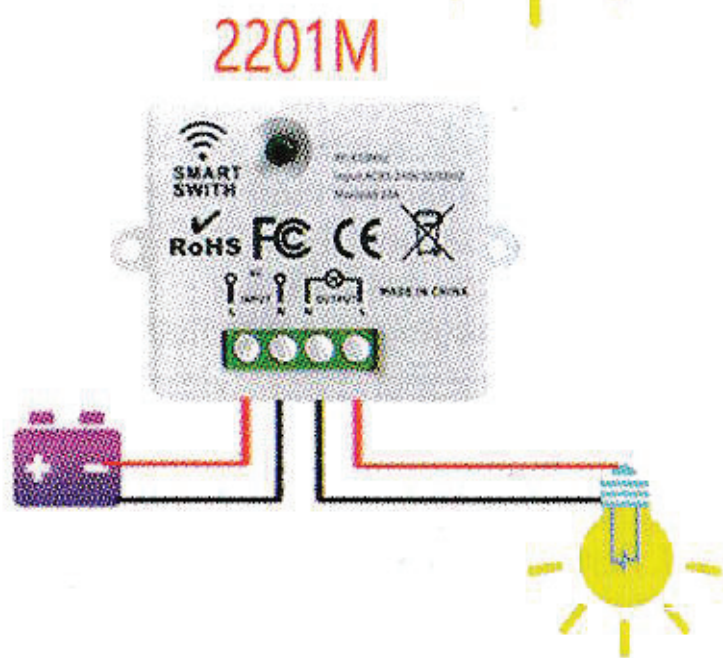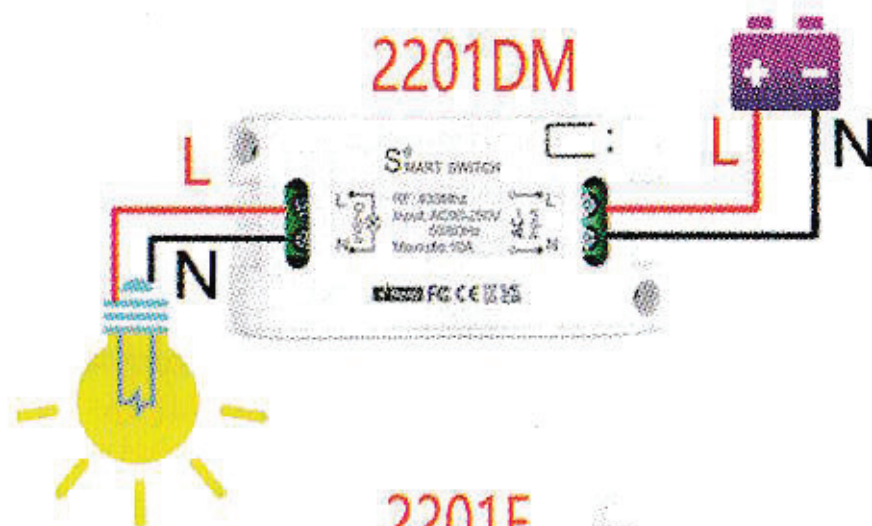

Slightly stretch the antenna before use for better signal reception

# PRODUCT INFORMATION



## Technical Data

Input voltage	AC 85V~250V
Output vlotage	AC 85V~250V
Quiescent Current	<5MA
Max current	10A
RF frequency	433.92MHz
Working temperature	-30~+80 °C
Receiving Sensitivity	>-97dbm
Amount of storage remote controls	20 pieces
Support encoding	1527 Leaning code
RF Operating mode	ASK superheterodyne wireless reception
Receiving range	Open space is more than 50 meters
Remote operating mode	Momentary Mode / Toggle Mode /Latched Mode

# 【 ENGLISH 】 OPERATING MODE

## ● Toggle Mode:

1. Press button "A", relay will turn on;
2. Press button "A" again, this relay will turn off.

### Match signal :

1. Press the learning button(on the receiver) **2 times**. Wait for 3 seconds;
2. Press one button on the remote control.  
Succeed.

## ● Latched mode:

1. Press button "A", relay will turn on;
2. Press button "B", this relay will turn off.

### Match signal :

1. Press the learning button(on the receiver) **3 times**. Wait for 3 seconds;
2. Press button "A" on the remote control.  
Wait for 3 seconds.
3. Press button "B" on the remote control.  
Succeed.

## ● Notice:

1. clear signal match before you want to change the operating mode of one remote control.
2. After clear signal matching, all the remote controls cannot work anymore.
3. Replace the battery in time when the remote control voltage is low.  
To get the stronger signal transmission.
4. Slightly stretch the antenna on the receiver for better signal reception.

## ● Momentary Mode:

1. Press and hold one button, relay will turn on;
2. Release the button, this relay will turn off.

### Match signal :

1. Press the learning button(on the receiver) **4 time**. Wait for 3 seconds;
2. Press one button on the remote control.  
Succeed.

## ● Delete signal match:

Press the learning button (on the receiver) **8 times**. succeed.

## ● Incoming call switching function mode.

Performance:

Status 1: After repowering, the light remains off.  
(The factory default is this state)

Status 2: After repowering, the light will turn on automatically.

How to switch status1/2 :

Press the learning button(on the receiver) **6 times**