




EN: This Datasheet/Document is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.

Universal Capacity Indicator

—TH01/LY6N/LY6W—

Sketch :

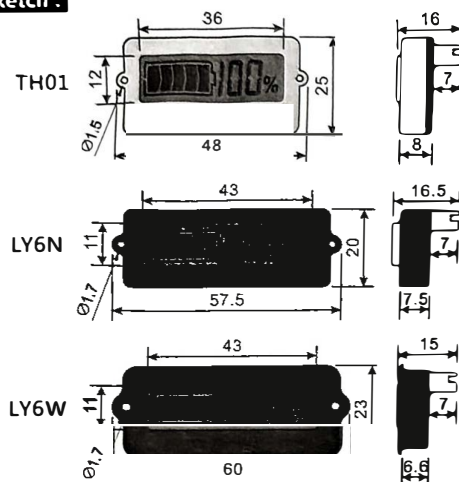

Overviews :

★ TH01/LY6 is designed to test the capacity of battery , and display them with intuitive battery symbol and percentage. Users can know the state of battery in time. It is suitable for ups , instruments ,measuring equipments ,cleaning machines ,balance cars , e-bike and so on.

Application :

Lead-acid battery : 12V , 24V , 36V , 48V 60V ;

Lithium-ion battery : 3cells ~ 16cells ;

Lithium iron phosphate battery: 3 cells ~ 19 cells;


Note : Other specifications (1cell , 2cells and more than 16 cells) should be customized , and the specifications can't be adjusted.

Parameter	Min	Type	Max	Unit
Working voltage	8.0		66.0	V
Working current		3.0	5.0	A
Working dissipation			5.0	mA
Temperature range	0	20	40	°C
Weight	TH01:15/LY6:13			g
Size	59×27×17			mm

Page1






★ The indicator provides a connector consists of plug , black line and red line. Connect the black line to the negative , the red line to the positive , the plug to the socket of indicator. Then , power on or turn on the switch , it will be work. As shown below

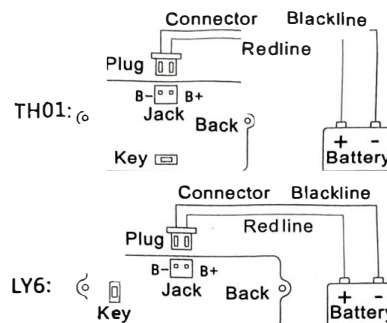

Install :

★ **TH01/LY6N:** First , open one rectangular orifice and two screw holes on the panel of the equipment. Then install the indicator from the back of the panel , and put the prominent LCD in the rectangular orifice. Finally , fix the indicator with tapping screws from the front of the panel. As shown below:

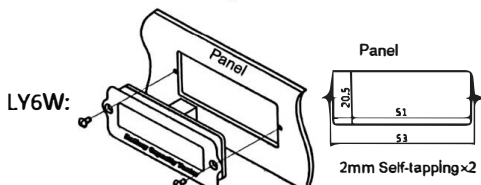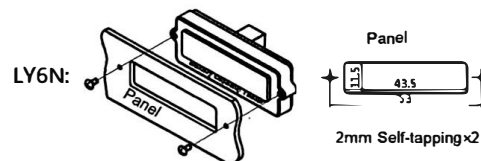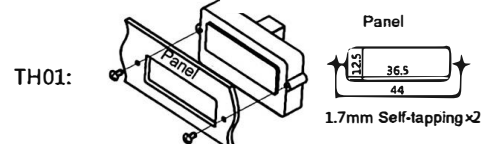

Page2

★ **LY6W:** First , open one rectangular orifice and two screw holes on the panel of the equipment. Then install the indicator from the front of the panel ,and put the shell of indicator into the rectangular orifice. Finally , fix the indicator with tapping screws from the front of the panel. As shown below:

Specification adjustment :

★ Press and hold the down key on the back when turn off , then power on. LCD displays the present specification. Use the down key and up key to adjust specifications , select suitable specification you need ,then turn off and power on. The indicator will be work normally (correspond code as below form).

3 cells	3c	3 cells	3F	17 cells	17F
4 cells	4c	4 cells	4F	18 cells	18F
5 cells	5c	5 cells	5F	19 cells	19F
6 cells	6c	6 cells	6F		
7 cells	7c	7 cells	7F		
8 cells	8c	8 cells	8F		
9 cells	9c	9 cells	9F		
10 cells	10c	10 cells	10F		
11 cells	11c	11 cells	11F	Lead-acid	Code
12 cells	12c	12 cells	12F	12V	1P
13 cells	13c	13 cells	13F	24V	2P
14 cells	14c	14 cells	14F	36V	3P
15 cells	15c	15 cells	15F	48V	4P
16 cells	16c	16 cells	16F	60V	5P

Accessory :

★ One connector with two lines , 20mm in length. If it is short , please lengthen it by yourself.

★ **TH01:** M1.7×5mm self-tapping screw×4 (round head×2 , countersunk head×2).

★ **LY6N/LY6W:** M2.0×6mm self-tapping screw×4 (round head×2 , countersunk head×2).

Attention and warranty :

★ The tester cannot be exposed in the sun for a long time. When using or storing , please keep the temperature higher than -20°C and lower than 60°C , otherwise it will shorten the life of LCD.

★ Within one year ,any fault caused by non-artificial reason we should maintain it freely.

Our products will be under warranty if the user buys it with this instruction, please take the material object or website as the standard.

Page3