EN: This Datasheet/Document is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.



mikromedia™

for PIC18FJ®

Compact development system rich with on-board peripherals for all-round multimedia development on PIC18F87J50 device.

MikroElektronika
DEVELOPMENT TOOLS | COMPILERS | BOOKS

PIC

TO OUR VALUED CUSTOMERS

I want to express my thanks to you for being interested in our products and for having confidence in MikroElektronika.

The primary aim of our company is to design and produce high quality electronic products and to constantly improve the performance thereof in order to better suit your needs.



Nebojsa Matic
General Manager


The PIC®, dsPIC®, PIC24®, PIC32® and Windows® logos and product names are trademarks of Microchip Technology® and Microsoft® in the U.S.A. and other countries.

Table of Contents

Introduction to mikromedia™ for PIC18FJ® 4
Package Contains 5
Key Features 6
System Specification 7
1. USB power supply 8
2. Battery power supply 9
3. Microcontroller PIC18F87J50 10
Key microcontroller features 10
4. Programming the microcontroller 11
Programming with mikroBootloader 12
step 1 – Connecting mikromedia 12
step 2 – Browsing for .hex file 13
step 3 – Select .hex file 13
step 4 – .hex file uploading 14
step 5 – Finish upload 15
Programing with mikroProg™ programmer 16
mikroProg Suite™ for PIC® Software 17
Programing with ICD2® or ICD3® programmer 18
5. Crystal oscillator 20
6. microSD Card Slot 21
7. Touch Screen 22
8. Audio Module 24
9. USB connection 26
10. Accelerometer 28
11. Flash Memory 29
12. Pads 30
13. Pinout 31
14. Dimensions 32
15. mikromedia Accessories 33
16. What's Next? 34

Introduction to mikromedia™ for PIC18FJ®

The **mikromedia™ for PIC18FJ®** is a compact development system with lots of on-board peripherals which allow development of devices with multimedia contents. The central part of the system is a 8-bit **PIC18F87J50** microcontroller. The mikromedia™ for PIC18FJ® features integrated modules such as stereo MP3 codec, **TFT 320x240 touch screen** display, accelerometer, USB connector, MMC/SD card slot and other. It comes pre-programmed with USB bootloader, but can also be programmed with external programmers, such as mikroProg™ or ICD2/3®. Mikromedia is compact and slim, and perfectly fits in the palm of the hand, which makes it convenient platform for mobile devices.

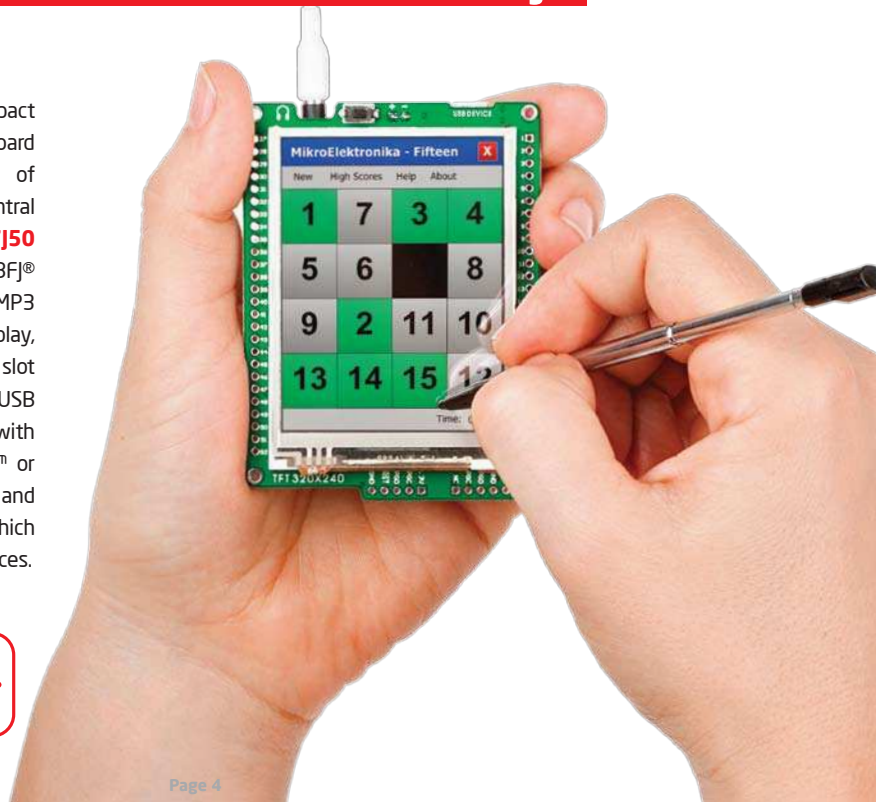







Package Contains



01 Damage resistant protective box



02 mikromedia™ for PIC18FJ® development system



03 DVD with documentation and examples



04 mikromedia™ for PIC18FJ® user's guide




05 mikromedia™ for PIC18FJ® schematic




06 USB cable

Key Features

01 Connection Pads
02 TFT 320x240 display
03 USB MINI-B connector
04 LI-Polymer battery connector
05 3.5mm headphone connector
06 Power supply regulator
07 Serial Flash memory
08 VS1053 Stereo mp3 coder/decoder
09 RESET button
10 PIC18F87J50 microcontroller
11 Accelerometer
12 Crystal oscillator
13 Power indicator LED
14 microSD Card Slot
15 ICD2/3® connector
16 mikroProg™ connector

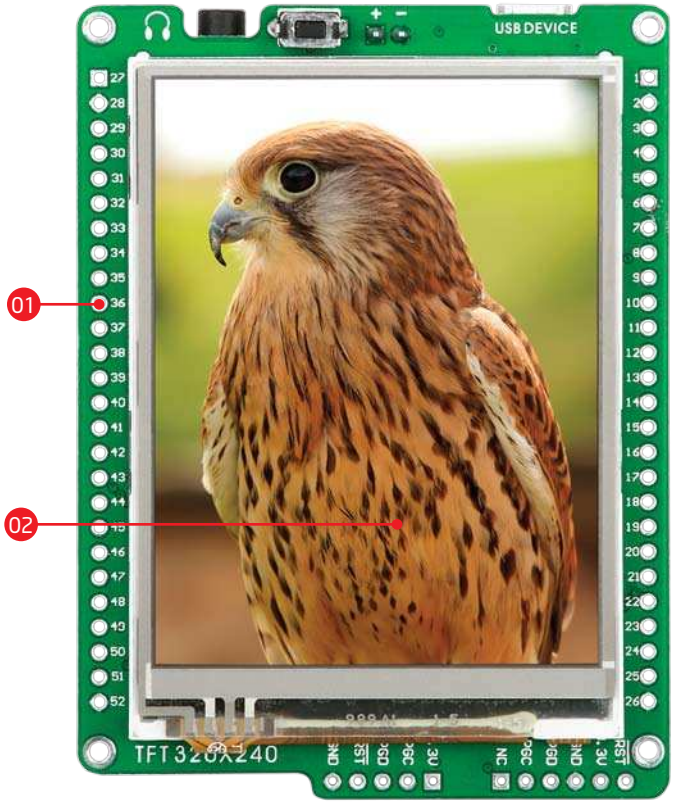

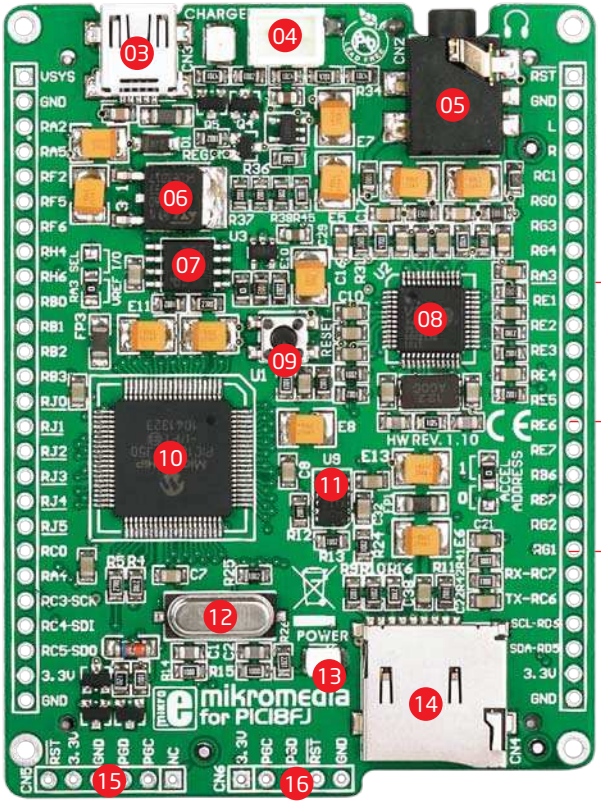

System Specification

power supply

Over a USB cable (5V DC)

power consumption

53 mA with erased MCU

(when on-board modules are inactive)

board dimensions

8 x 6cm (3.14 x 2.36 inch)

weight

~45,5g (0.10 lbs)

1. USB power supply



Figure 1-1: Powering your mikromedia™ board with USB cable

You can apply power supply to the board using **MINI-B USB** cable provided with the board. On-board voltage regulators will make sure to regulate the appropriate voltage levels to each part of the board. Power LED will indicate the presence of power supply.

2. Battery power supply



Figure 2-1:
Connecting Li-polymer battery to mikromedia™ board

You can also power the board using **Li-Polymer** battery, via on-board battery connector. On-board battery charger circuit **MCP73832** enables you to charge the battery over USB connection. Charging current is ~250mA and charging voltage is 4.2V DC.


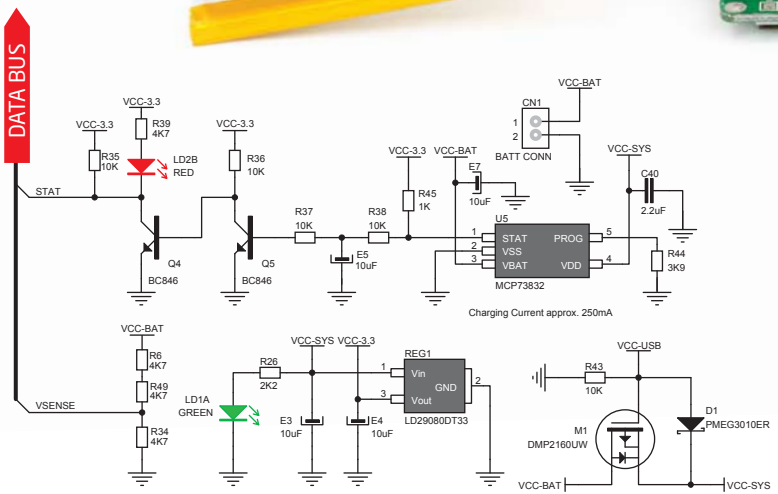


Figure 2-2:
Battery charger and power management connection schematic

3. Microcontroller PIC18F87J50

The mikromedia™ for PIC18FJ® development system comes with the **PIC18F87J50** microcontroller. This high-performance 8-bit microcontroller with its integrated modules and in combination with other on-board modules is ideal for multimedia applications.

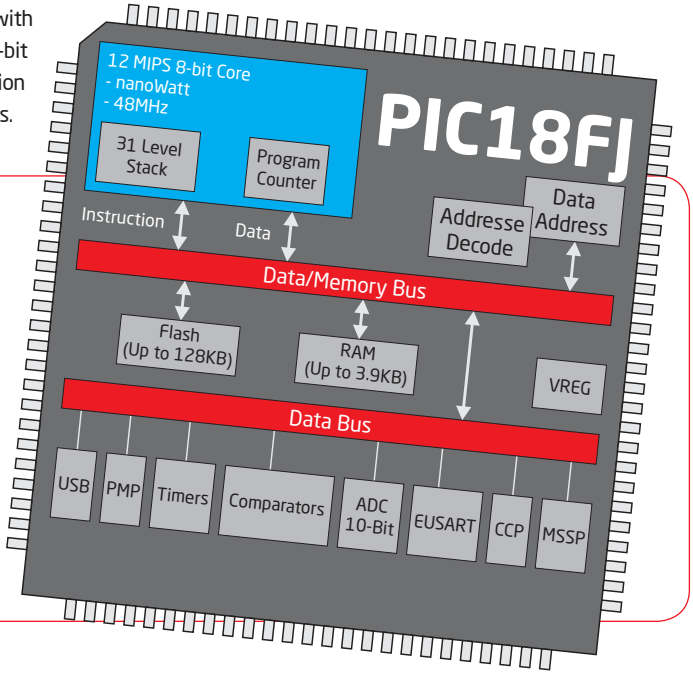

Key microcontroller features

- USB V2.0 Compliant SIE;
- Two External Clock modes, up to 48 MHz;
- Internal 31 kHz Oscillator, Tunable Internal Oscillator; 31 kHz to 8 MHz;
- 10-Bit, up to 12-Channel Analog-to-Digital (A/D);
- Address Capability of up to 2 Mbytes;
- 8-Bit or 16-Bit Interface;
- 12-Bit, 16-Bit and 20-Bit Addressing modes; etc.

4. Programming the microcontroller

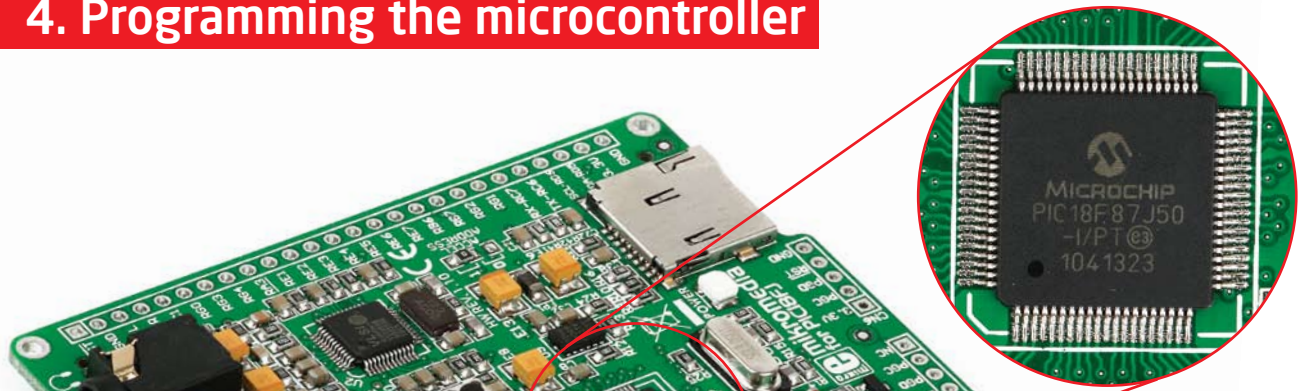


Figure 4-1: PIC18F87J50 Microcontroller

The microcontroller can be programmed in three ways:


01 Via USB HID mikroBootloader
02 Using mikroProg™ external programmer
03 Using ICD2/3® external programmer

Programming with mikroBootloader

You can program the microcontroller with bootloader which is preprogrammed into the device by default. To transfer .hex file from a PC to MCU you need bootloader software (**mikroBootloader USB HID**) which can be downloaded from:

http://www.mikroe.com/eng/products/view/585/mikromedia-for-pic18fj/

After software is downloaded unzip it to desired location and start mikroBootloader USB HID software.

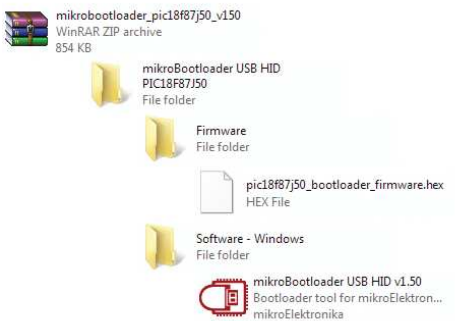

step 1 - Connecting mikromedia



Figure 4-2: mikroBootloader USB HID

01 Connect mikromedia™ board with a PC via USB cable and USB icon will turn red.

02 Click the **Connect button** within 5s, otherwise existing microcontroller program will execute.

step 2 - Browsing for .hex file



Figure 4-3: Browse for HEX

01 Click on **Browse for HEX button**

step 3 - Select .hex file

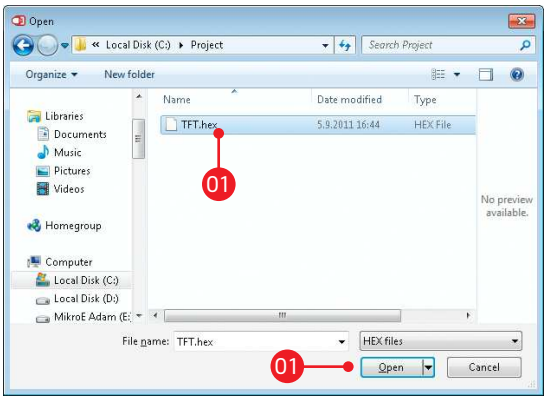


Figure 4-4: Selecting HEX

01 Select .hex file via open window

02 Click on **Open button**

step 4 – .hex file uploading



Figure 4-5: Begin uploading

01 To start .hex file uploading click on **Begin uploading button**

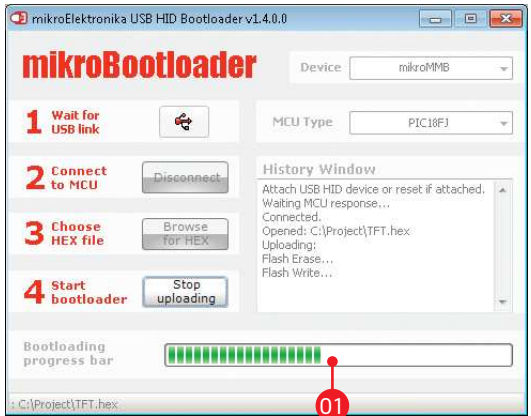


Figure 4-6: Progress bar

01 You can monitor .hex file uploading via progress bar

step 5 - Finish upload



Figure 4-7: Restarting MCU

01 To finish uploading click on **OK button**



Figure 4-8: mikroBootloader ready for next job

Programing with mikroProg™ programmer

The microcontroller can be programmed with **mikroProg™ programmer** and **mikroProg Suite™ fo PIC®** software. The mikroProg™ programmer is connected to the development system via the CN6 connector, Figure 4-9.



Figure 4-9:
Connecting mikroProg™ to mikromedia™

mikroProg™ is a fast USB 2.0 programmer with mikroICD™ hardware In-Circuit Debugger. Smart engineering allows mikroProg™ to support PIC10®, PIC12®, PIC16®, PIC18®, dsPIC30/33®, PIC24® and PIC32® devices in a single programmer. It supports over 570 microcontrollers from Microchip®. Outstanding performance, easy operation and elegant design are it's key features.

mikroProg Suite™ for PIC® Software

mikroProg™ programmer requires special programming software called **mikroProg Suite™ for PIC®**. This software is used for programming ALL of Microchip® microcontroller families, including PIC10®, PIC12®, PIC16®, PIC18®, dsPIC30/33®, PIC24® and PIC32®. Software has intuitive interface and SingleClick™ programming technology. Just by downloading the latest version of **mikroProg Suite™** your programmer is ready to program new devices. **mikroProg Suite™** is updated regularly, at least four times a year, so your programmer will be more and more powerful with each new release.

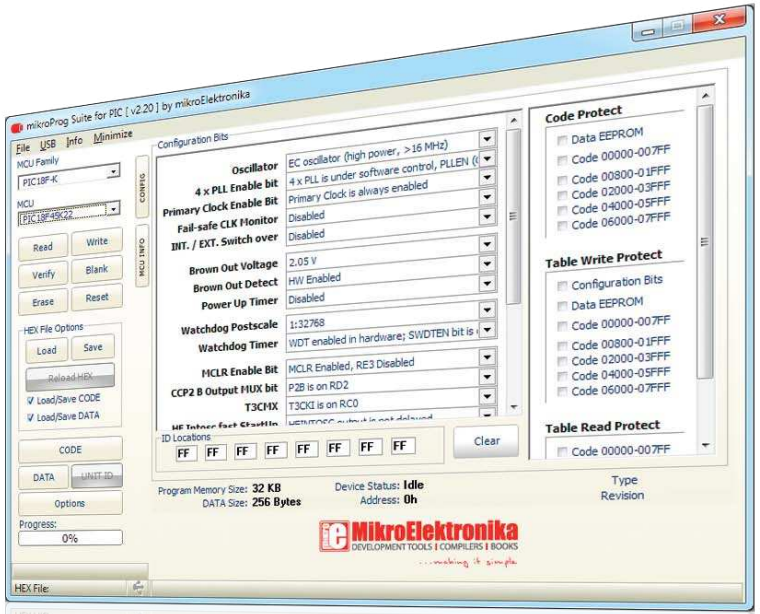


Figure 4-10: Main Window of mikroProg Suite™ for PIC® programming software

Programing with ICD2® or ICD3® programmer

The microcontroller can be also programmed with **ICD2® or ICD3® programmer**. These programmers connect with mikromedia board via **ICD2 CONNECTOR BOARD.**

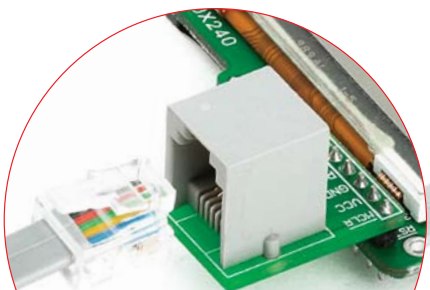


Figure 4-11: Placing ICD2® connector



Figure 4-12: Connecting ICD2® or ICD3® programmer

In order to enable the ICD2® and ICD3® programmers to be connected to the development system, it is necessary to provide the appropriate connector such as the **ICD2 CONNECTOR BOARD**. This connector should be first soldered on the CN5 connector, Figure 4-12. Then you should plug the ICD2® or ICD3® programmer into it, Figure 4-11.

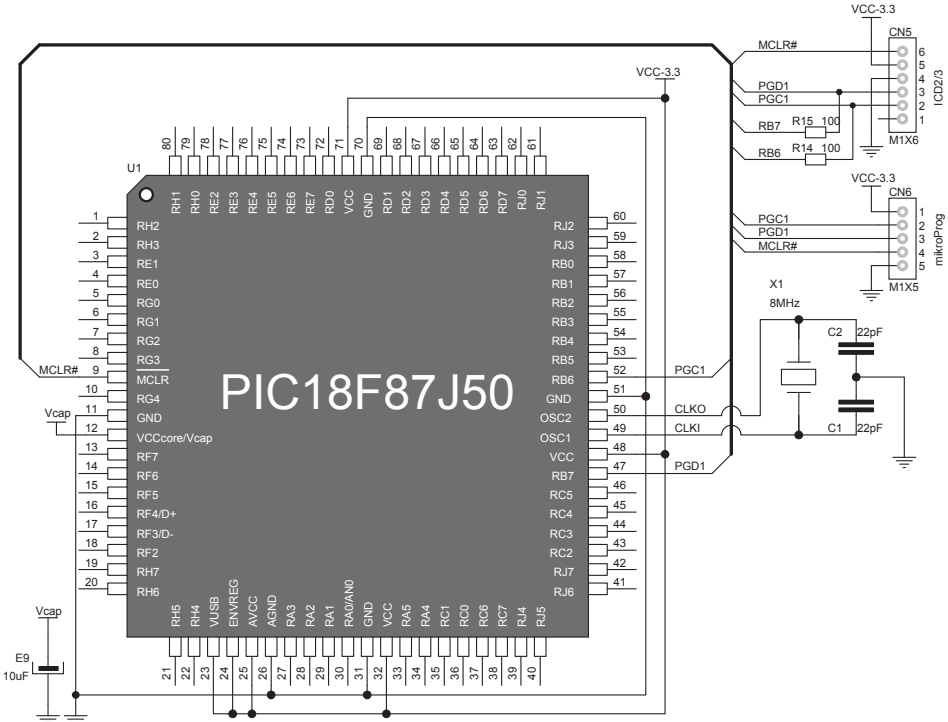


Figure 4-13: mikroProg™ and ICD2®/ICD3® programmer connection schematic

5. Crystal oscillator

Board is equipped with **8Mhz crystal oscillator** circuit that provides external clock to the microcontroller OSC pins. This base frequency is suitable for further clock multipliers and ideal for generation of necessary USB clock, which ensures proper operation of bootloader and your custom USB-based applications.

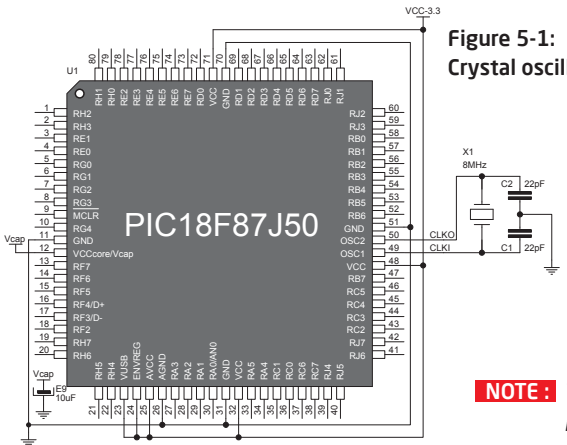


Figure 5-1:
Crystal oscillator schematic



Figure 5-2:
Crystal oscillator module

NOTE : *The use of crystal in all other schematics is implied even if it is purposely left out, because of the schematics clarity.*

6. microSD Card Slot

Board contains **microSD card slot** for using microSD cards in your projects. It enables you to store large amounts of data externally, thus saving microcontroller memory. microSD cards use Serial Peripheral Interface (**SPI**) for communication with the microcontroller.

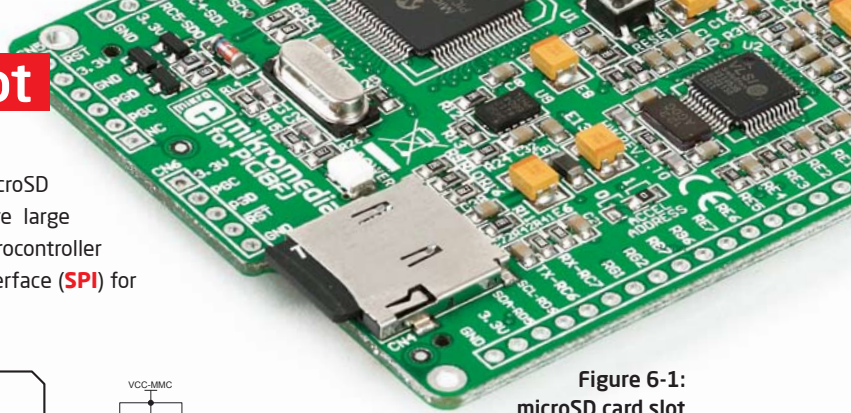


Figure 6-1:
microSD card slot

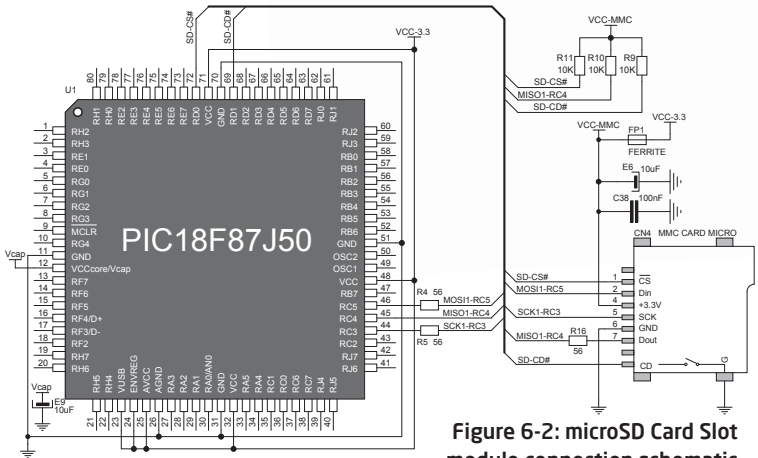


Figure 6-2: microSD Card Slot
module connection schematic

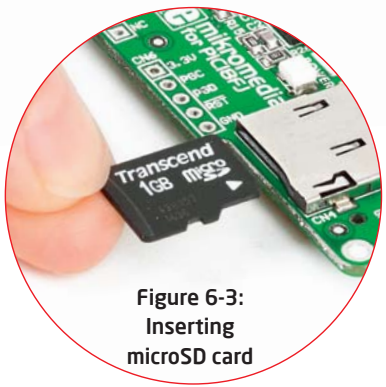


Figure 6-3:
Inserting
microSD card

7. Touch Screen

The development system features a **TFT 320x240 display** covered with a **resistive** touch panel. Together they form a functional unit called a **touch screen.** It enables data to be entered and displayed at the same time. The TFT display is capable of showing data in **262.000** different **colors**.

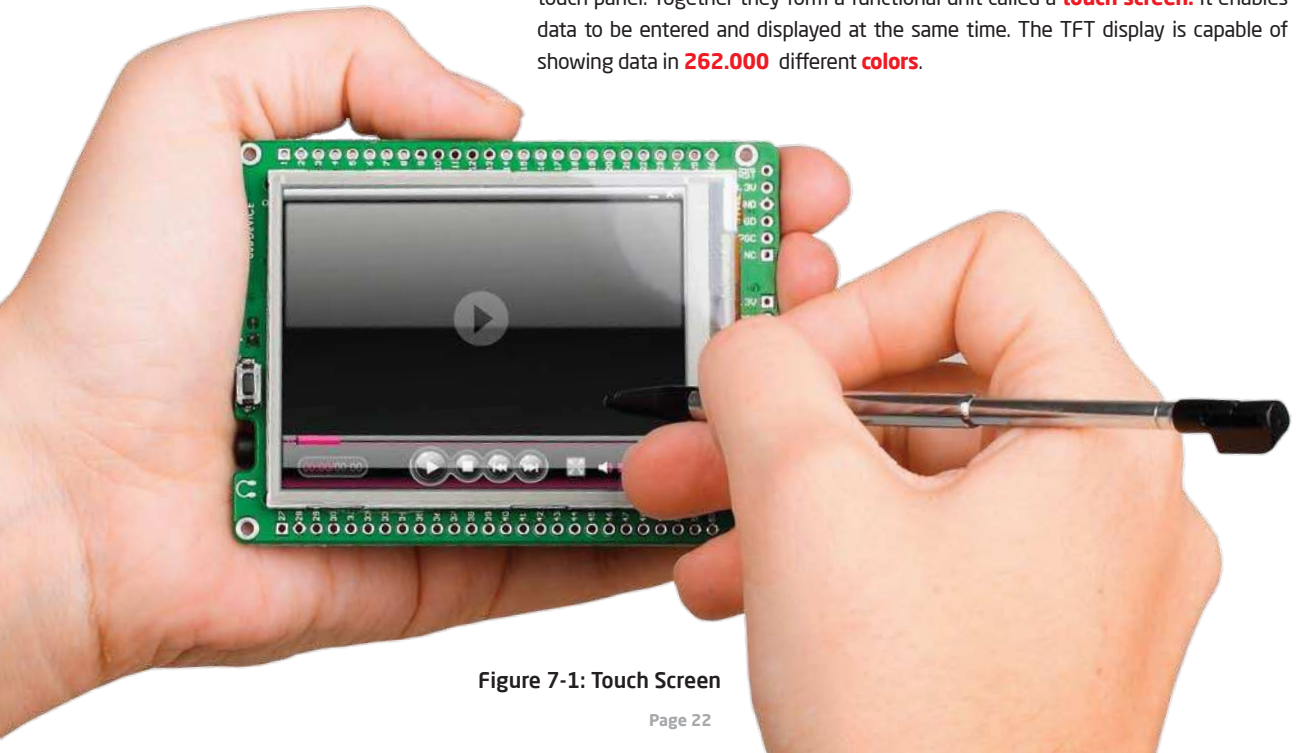


Figure 7-1: Touch Screen

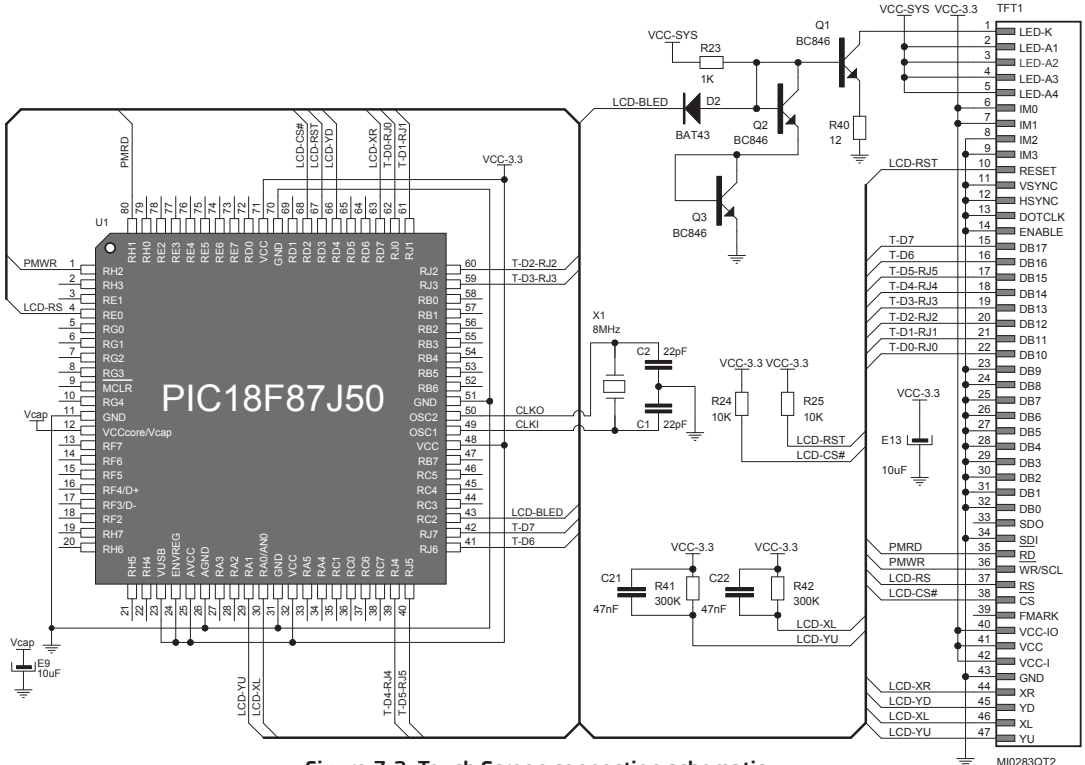


Figure 7-2: Touch Screen connection schematic

8. Audio Module

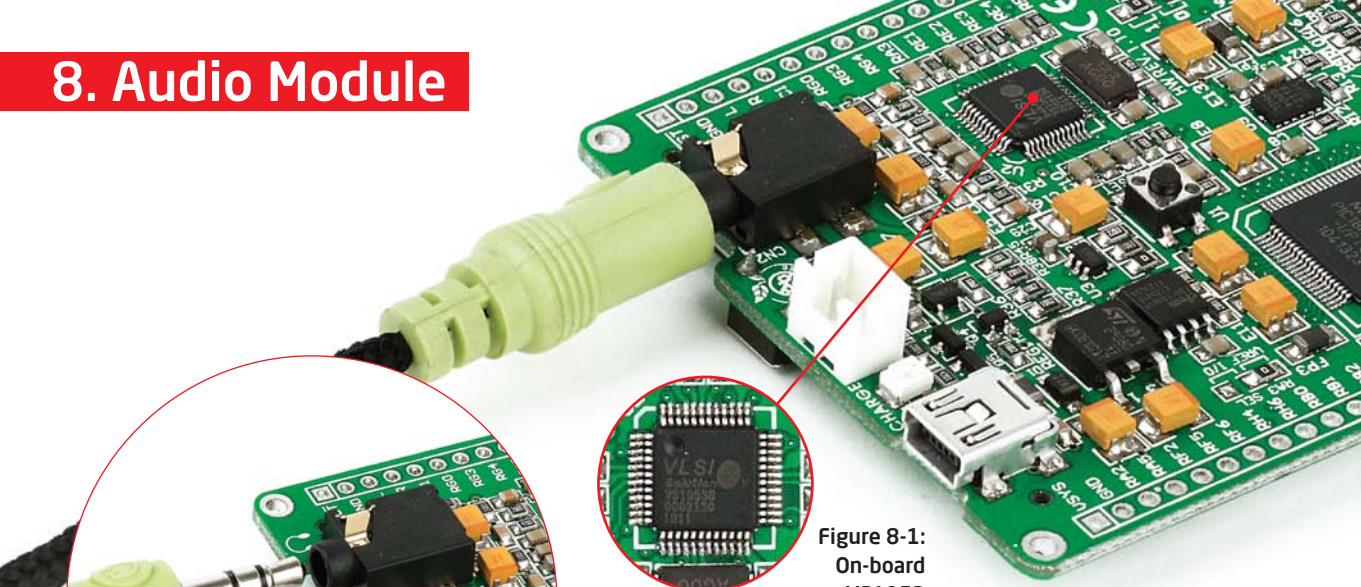


Figure 8-1: On-board VS1053 MP3 codec

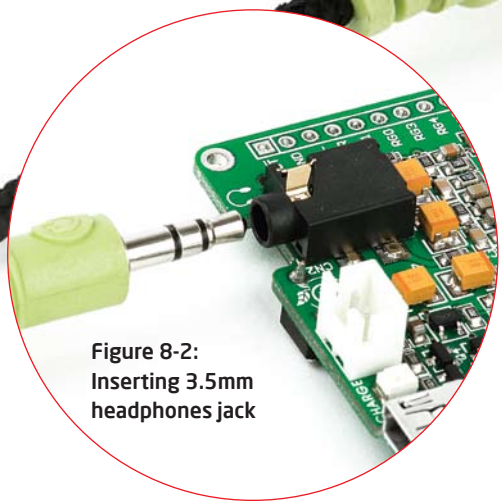


Figure 8-2: Inserting 3.5mm headphones jack

The mikromedia™ for PIC18FJ® features MP3 codec audio controller **VS1053**. This module enables audio reproduction by using stereo headphones connected to the system via a **3.5mm** connector CN2. All functions of this module are controlled by the microcontroller over Serial Peripheral Interface (**SPI**).

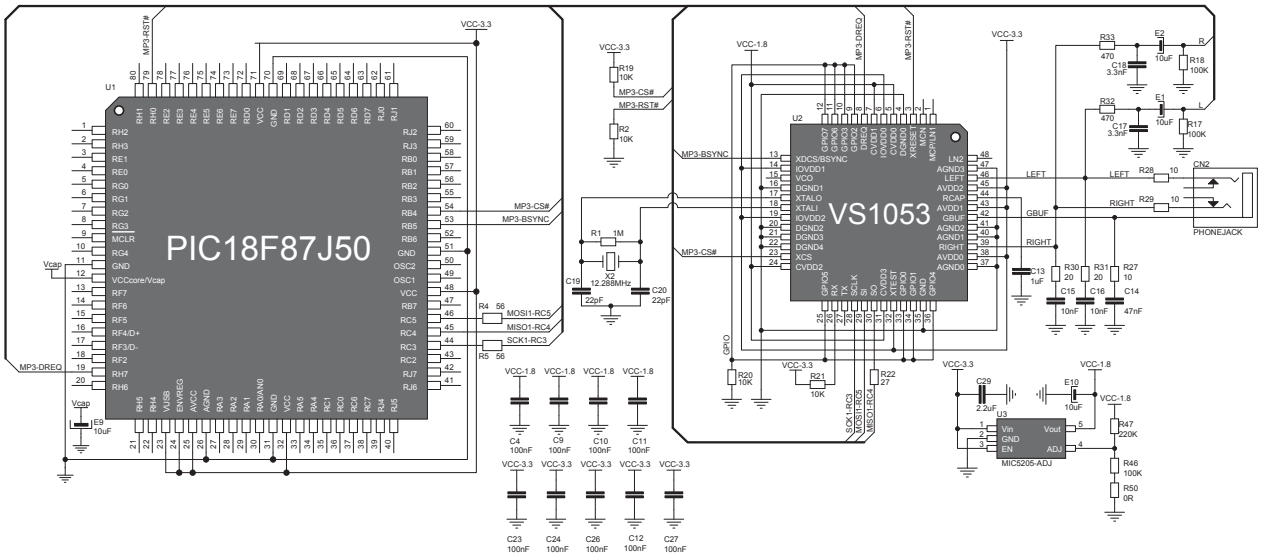


Figure 8-3: Audio module connection schematic

9. USB connection

PIC18F87J50 microcontroller has integrated USB module, which enables you to implement USB communication functionality of your mikromedia board. Connection with target USB host is done over MINI-B USB connector which is positioned next to the battery connector.

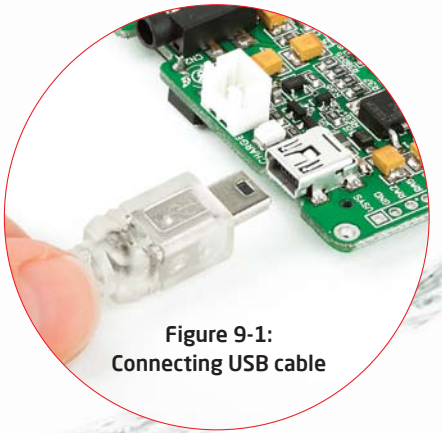


Figure 9-1:
Connecting USB cable

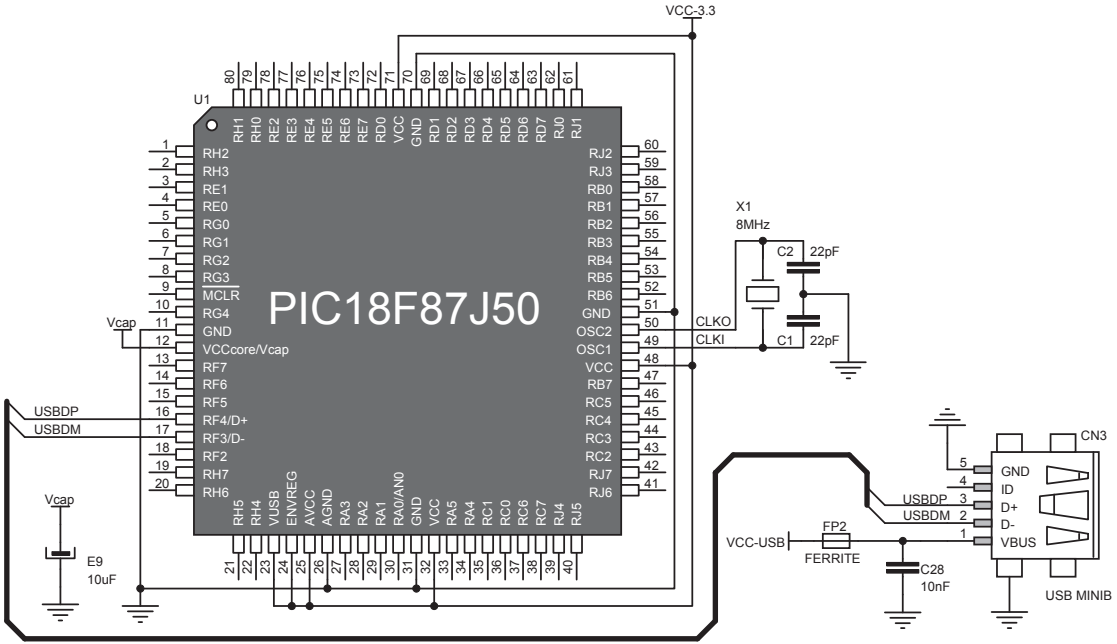


Figure 9-2: USB module connection schematic

10. Accelerometer

On board **ADXL345** accelerometer is used to measure acceleration in three axis: x- y- and z-. The accelerometer function is defined by the user in the program loaded into the microcontroller. Communication between the accelerometer and the microcontroller is performed over the **I2C** interface.

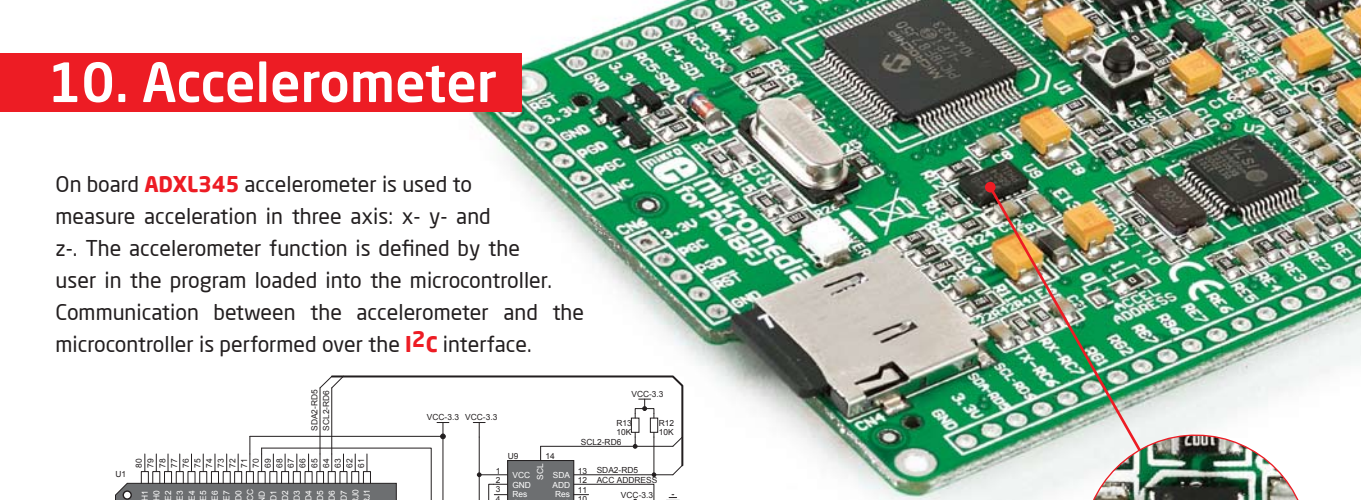


Figure 10-2: Accelerometer connection schematic



Figure 10-1: Accelerometer module



You can set the accelerometer address to 0 or 1 by re-soldering the SMD jumper (zero-ohm resistor) to the appropriate position. Jumper is placed in address 1 position by default.

11. Flash Memory

Since multimedia applications are getting increasingly demanding, it is necessary to provide additional memory space to be used for storing more data. The flash memory module enables the microcontroller to use additional **8Mbit** flash memory. It is connected to the microcontroller via the Serial Peripheral Interface (**SPI**).

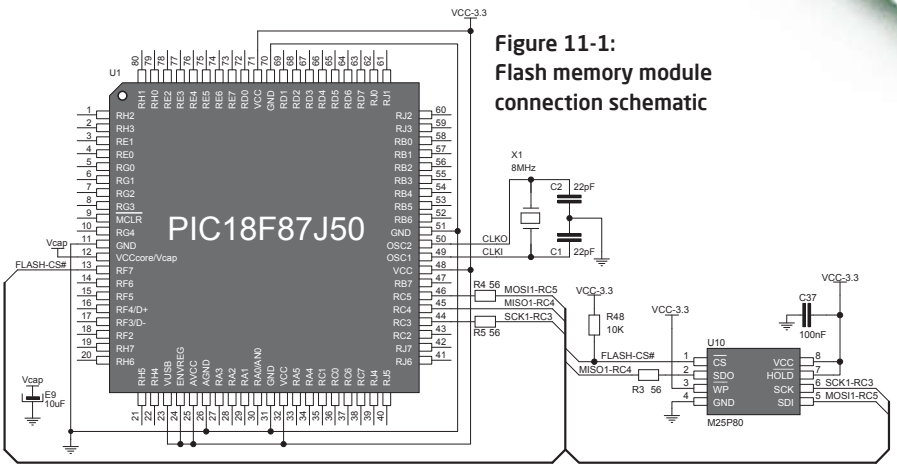



Figure 11-1: Flash memory module connection schematic



Figure 11-2: Flash memory module

12. Pads



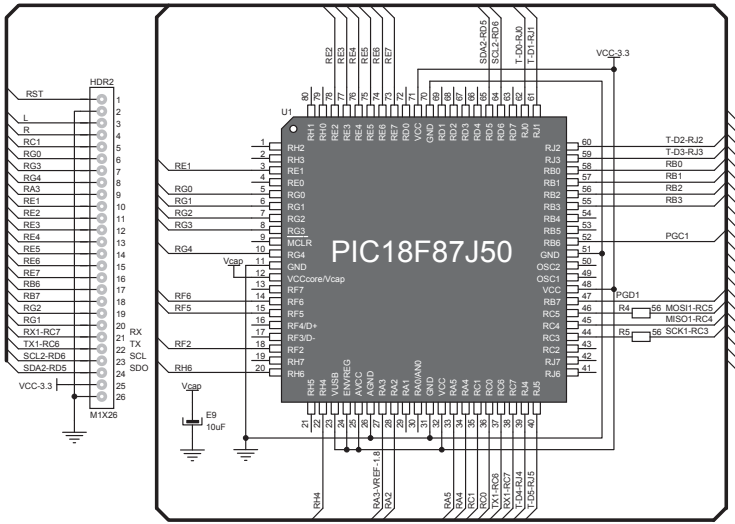



Pads HDR2

Pads HDR1

Figure 12-1: Pads connecting schematic

Most microcontroller pins are available for further connectivity via two 1x26 rows of connection pads on both sides of the mikromedia board. They are designed to match additional shields, such as Battery Boost shield, Gaming, PROTO shield and others. Pads with underlined silkscreen markings have multiple functions (see the complete schematic for more information).


13. Pinout



Pin functions			Pin functions	
System power supply	VSYS	VSYS	RST	Reset pin
Reference Ground	GND	GND	GND	Reference Ground
AN2/VREF-	RA2	RA2	L	left ch. (audio out)
AN4/C2INA	RA5	RA5	R	right ch. (audio out)
AN7/C2INB	RF2	RF2	RC1	ECCP2/T1OSI/P2A
AN10/ C1INB/CVREF	RF5	RF5	RG0	ECCP3/P3A
AN11/C1INA	RF6	RF6	RG3	CCP4/P3D
AN12/P3C/C2INC	RH4	RH4	RG4	CCP5/P1D
AN14/P1C/C1INC	RH6	RH6	RA3	AN3/VREF+
FLT0/INT0	RB0	RB0	RE1	AD9/P2C
INT1	RB1	RB1	RE2	AD10/P2B
INT2	RB2	RB2	RE3	AD11/P3C/REFO
INT3	RB3	RB3	RE4	AD12/P3B
$\overline{ALE}$	RJ0	RJ0	RE5	AD13/P1C
$\overline{OE}$	RJ1	RJ1	RE6	AD14/P1B
$\overline{WRL}$	RJ2	RJ2	RE7	AD15/P2A
$\overline{WRH}$	RJ3	RJ3	RB6	KBI2/PGC
$\overline{BA0}$	RJ4	RJ4	RB7	KBI3/PGD
$\overline{CE}$	RJ5	RJ5	RG2	RX2/DT2
T1OSO/T13CKI	RC0	RC0	RG1	TX2/CK2
T0CKI	RA4	RA4	RC7	RX1/DT1
SCL1/SCK1	RC3	RC3	RC6	TX1/CK1
SDA1/SDI1	RC4	RC4	RD6	AD6/SCL2
C2OUT/SDO1	RC5	RC5	RD5	AD5/SDA2
3.3V power supply	3.3V	3.3V	3.3V	3.3V power supply
Reference Ground	GND	GND	GND	Reference Ground

Programing lines | Analog Lines | Interrupt Lines | SPI Lines | I2C Lines | UART lines | PWM lines | Comparator lines

14. Dimensions

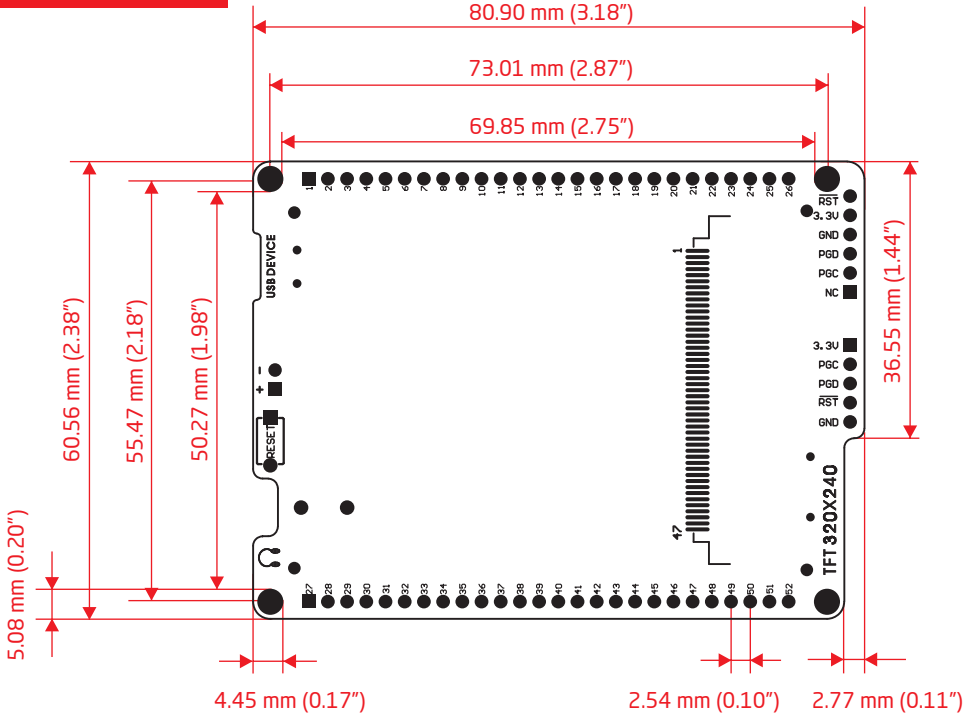

15. mikromedia™ accessories


We have prepared a set of extension boards pin-compatible with your mikromedia™, which enable you to easily expand your board basic functionality. We call them mikromedia shields. But we also offer other accessories, such as Li-polymer battery, stacking headers, wire jumpers and more.



01 Connect shield



02 BatteryBoost shield

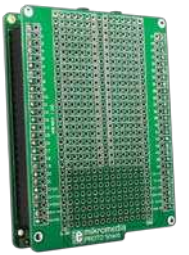

03 PROTO shield



04 Gaming shield



05 Li-Polimer battery



06 Wire Jumpers



07 Stacking headers

What's next?

You have now completed the journey through each and every feature of mikromedia™ for PIC18FJ® board. You got to know it's modules and organization. Now you are ready to start using your new board. We are suggesting several steps which are probably the best way to begin. We invite you to join the users of mikromedia™ brand. You will find very useful projects and tutorials and can get help from a large ecosystem of users. Welcome!

Compiler

You still don't have an appropriate compiler? Locate PIC® compiler that suits you best on the Product DVD provided with the package:

DVD://download/eng/software/compilers/

Choose between mikroC™, mikroBasic™ and mikroPascal™ and download fully functional demo version, so you can begin building your first applications.





Projects

Once you have chosen your compiler, and since you already got the board, you are ready to start writing your first projects. **Visual TFT™ software** for rapid development of graphical user interfaces enables you to quickly create your GUI. It will automatically create necessary code which is compatible with mikroElektronika compilers. Visual TFT™ is rich with examples, which are an excellent starting point for your future projects. Just load the example, read well commented code, and see how it works on hardware. Visual TFT™ is also available on the Product DVD.

DISCLAIMER

All the products owned by MikroElektronika are protected by copyright law and international copyright treaty. Therefore, this manual is to be treated as any other copyright material. No part of this manual, including product and software described herein, may be reproduced, stored in a retrieval system, translated or transmitted in any form or by any means, without the prior written permission of MikroElektronika. The manual PDF edition can be printed for private or local use, but not for distribution. Any modification of this manual is prohibited.

MikroElektronika provides this manual 'as is' without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties or conditions of merchantability or fitness for a particular purpose.

MikroElektronika shall assume no responsibility or liability for any errors, omissions and inaccuracies that may appear in this manual. In no event shall MikroElektronika, its directors, officers, employees or distributors be liable for any indirect, specific, incidental or consequential damages (including damages for loss of business profits and business information, business interruption or any other pecuniary loss) arising out of the use of this manual or product, even if MikroElektronika has been advised of the possibility of such damages. MikroElektronika reserves the right to change information contained in this manual at any time without prior notice, if necessary.

HIGH RISK ACTIVITIES

The products of MikroElektronika are not fault - tolerant nor designed, manufactured or intended for use or resale as on - line control equipment in hazardous environments requiring fail - safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of Software could lead directly to death, personal injury or severe physical or environmental damage ('High Risk Activities'). MikroElektronika and its suppliers specifically disclaim any expressed or implied warranty of fitness for High Risk Activities.

TRADEMARKS

The MikroElektronika name and logo, the MikroElektronika logo, mikroC™, mikroBasic™, mikroPascal™, mikroProg™, EasyPIC™, EasyPIC PRO™, Visual TFT™ and mikromedia™ are trademarks of MikroElektronika. All other trademarks mentioned herein are property of their respective companies.
All other product and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are only used for identification or explanation and to the owners' benefit, with no intent to infringe.

Copyright © MikroElektronika, 2012, All Rights Reserved.



If you want to learn more about our products, please visit our website at www.mikroe.com
If you are experiencing some problems with any of our products or just need additional information, please place your ticket at www.mikroe.com/esupport
If you have any questions, comments or business proposals, do not hesitate to contact us at office@mikroe.com

mikromedia for PIC18FJ User Manual
ver. 1.00

0 100000 019443