



**EN:** This Datasheet/Document is presented by the manufacturer.

Please visit our website for pricing and availability at [www.hestore.hu](http://www.hestore.hu).

---

# AC digital multi-function meter

**Product type: PZEM-022**

## **A. Function**

1. Electrical parameter measurement function (voltage, current, active power, energy, frequency, power factor)
2. Overload alarm function (over power alarm threshold, backlight and power flashing to alarm).
3. Power alarm threshold preset function (can set power alarm threshold).
4. The energy can be reset use the key.
5. Store data when power off.
6. Large-screen LCD
7. Backlight function.

## **B. Appearance and Key function**

### **I. Display Interface**

Display interface is large-screen LCD, it can display six parameters at the same time.

### **II. Display format**

1. Power: test range: 0~22000W, Starting measure power: 0.5W

**<10W     display format: 1.00~9.99W**  
**<100W    display format: 10.0~99.9W**  
**<1000W   display format: 100~999W**  
**<10000W display format: 1.00~9.90kW**  
**≥10000W display format: 10.0~22.0kW**

2. Energy: test range: 0~999kWh

**<1kWh    display format: 0~999Wh**  
**<10kWh   display format: 1.00~9.99kWh**  
**≥10kWh   display format: 10~999kWh**

3. Voltage: test range: 80~260V

**Display format: 80~260V**

4. Current: test range: 0~100A, Starting measure current: 0.02A

**<10A display format: 0.000~9.000A**  
**≥10A display format: 10.00~99.99A**

5. Frequency: test range: 45~65Hz

**Display format: 45~65Hz**

6. Power factor: test range: 0~1PF

**Display format: 0.00~1.00PF**

### **III. Key**

#### **1. Backlight control**

Short press the key to turn on or off the backlight, the backlight has memory function, it can store the on or off state when power off.

#### **2. Reset energy**

Step1: Long press the key for 5 seconds until the energy value flash, then release the key.

Step2: Short press the key again, then the energy value is cleared and exit the reset flashing state.

Step3: If there is no operation on the key within 5 seconds, it means the energy value is not cleared and will exit the reset state.

### 3. Set power alarm threshold

Step1: Long press the key until the LCD screen display "SET CLr", then release the key to enter the setting state

Step2: Power window display the current power alarm value and the last digit begin to flash, then you can short press to plus 1, when there is no operating over 3 seconds, it will switch the digit position automatically, the setting method is as same as the above.

Step3: After finish the setting, long press the key over 5 seconds will store automatically and exit, the range of active power threshold is 0.0~22kW.


### C. Precautions

1. This module is suitable for indoor, please do not use outdoor.
2. Applied load should not exceed the rated power.
3. Wiring order can't be wrong.


### D. Specification parameters


1. Working voltage: 80 ~ 260VAC
2. Test voltage: 80 ~ 260VAC
3. Rated power: 100A/22000W
4. Operating frequency: 45-65Hz
5. Measurement accuracy: 1.0 grade

### E. Wiring diagram

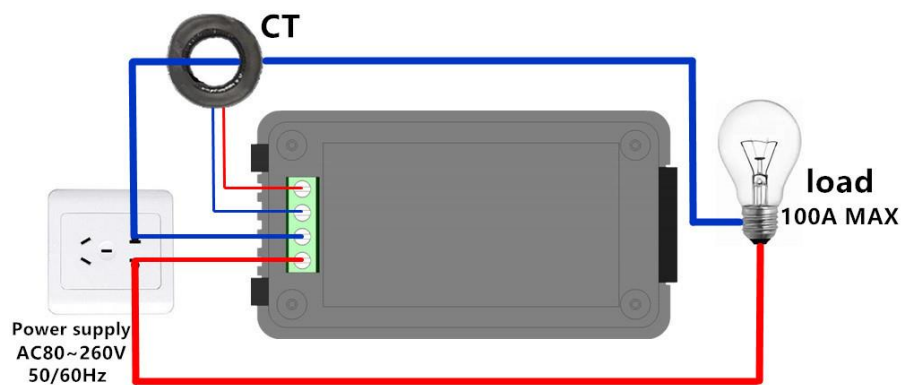

### F. dimension diagram (mm)

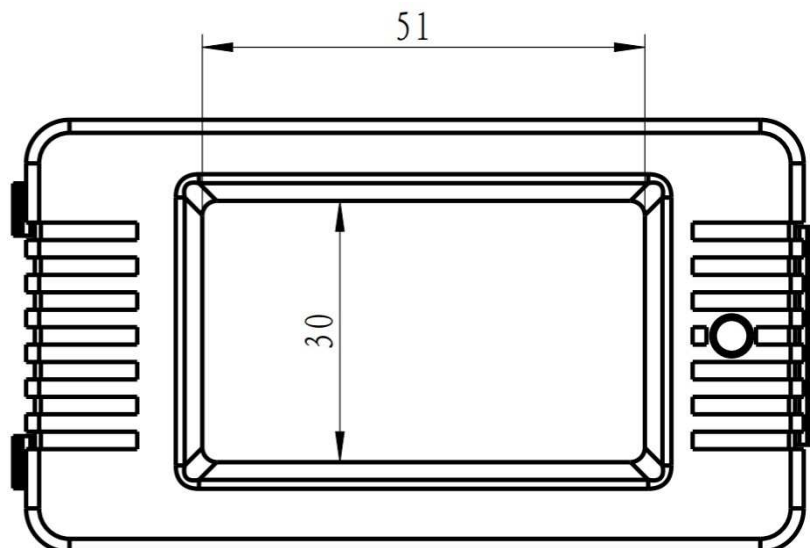

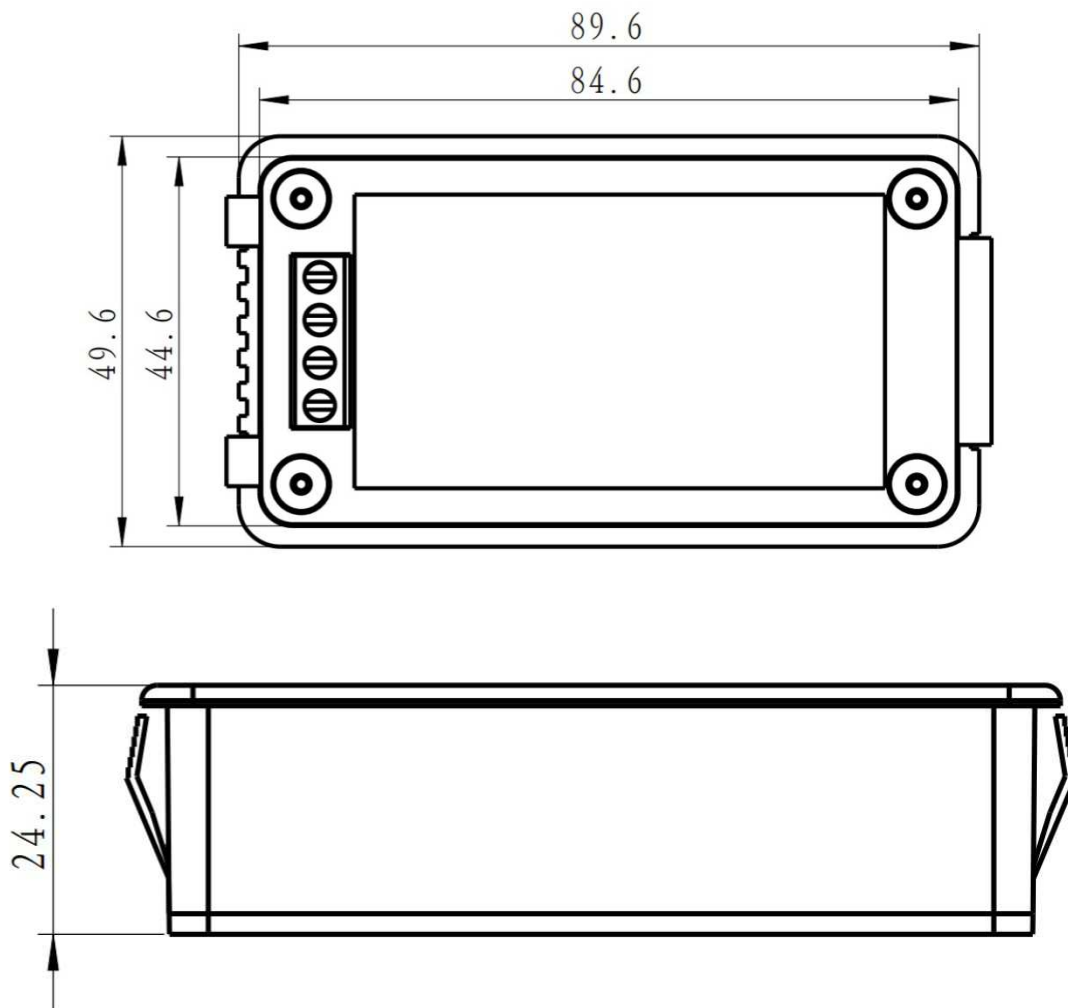

**G. Hole Size(mm)**

