



EN: This Datasheet/Document is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.

Digilent Discovery BNC Reference Manual

Revision: January 09, 2013

Note: This document applies to REV B of the board




1300 Henley Court | Pullman, WA 99163
(509) 334 6306 Voice and Fax

Overview

The Discovery BNC adapter board is intended to be used with the Analog Discovery™ tool to enable the use of standard BNC terminated test leads and probes. The adapter board enables the user to AC couple or DC couple signals to the oscilloscope in the Analog Discovery.

Features include:

- Standard BNC interface to BNC terminated test leads and oscilloscope probes.
- Selectable AC and DC coupling to oscilloscope probes.
- Selectable 50-ohm or 0-ohm output impedance on Arbitrary Waveform Generator (AWG) channels.

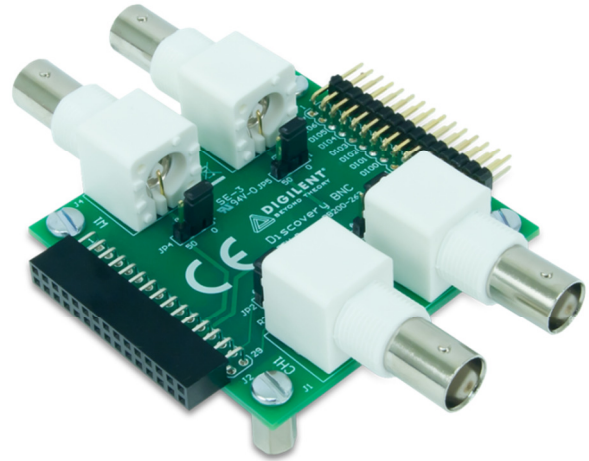

Functional Description

The Discovery BNC adapter board has BNC terminations to each of the two oscilloscope channels on the Analog Discovery. Each channel of the oscilloscope can be selected as AC or DC coupled by adjusting the jumper that is located behind that channel's BNC input connector.

The two AWG channels are equipped with BNC terminations for use with BNC style test leads. Each of the two channels can have either the 50-ohm or the 0-ohm termination selected. This enables the user to match the Analog Discovery's output impedance with either standard 50-ohm test leads or to be directly tied to the lead.

All the remaining signals from the Analog Discovery pass through the adaptor to a female header located on the outer edge of the board.